

Armrest Outer Cover Disassembly



Fig. 1

Remove the rear cover's marked red 4 screws, and take off the rear cover as in Fig. 1



Fig. 2

Pry open the upper cover from under the red marked buckle as in Fig. 2

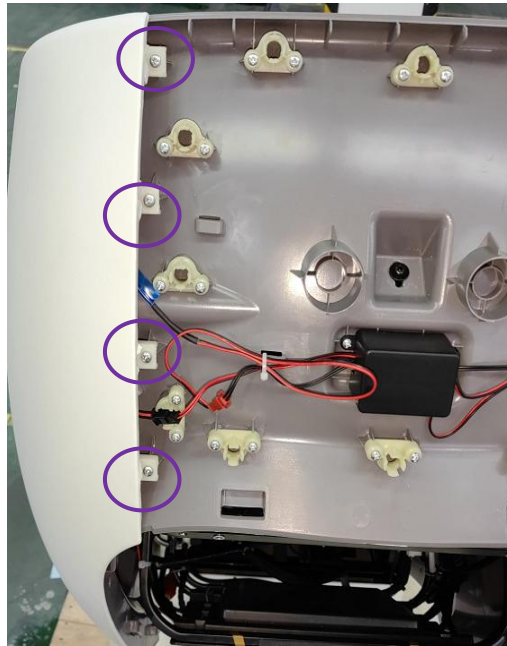


Fig. 3

Remove the upper inner cover's marked purple 4 screws as in Fig. 3



Fig. 4

Remove the 7 screws of the inner cover of the armrest marked with blue as in Fig. 4

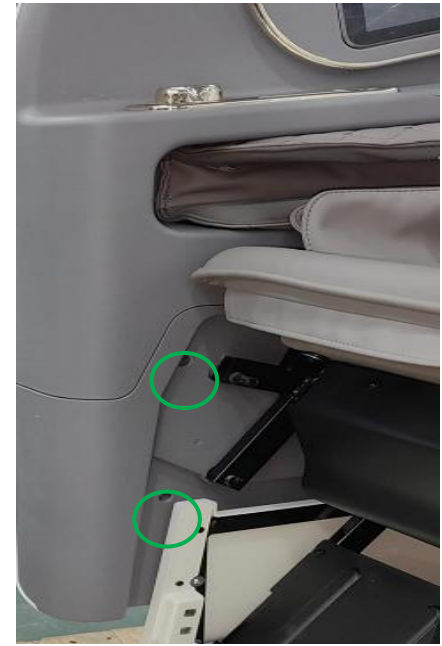


Fig. 5

Remove the 2 screws at the front end of the armrest marked green as in Fig. 5 to remove the outer cover

Armrest Upper Inner Cover Disassembly

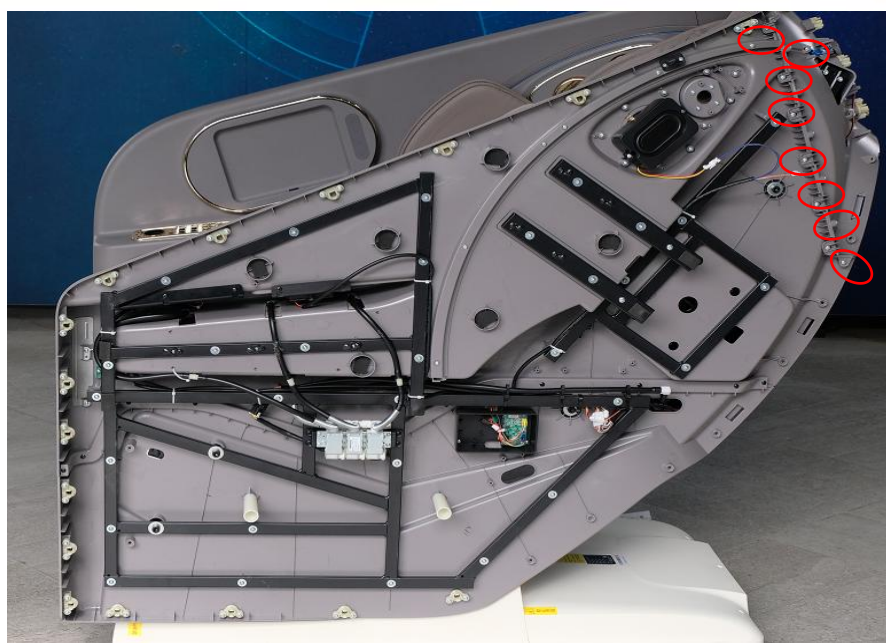


Fig. 1

Remove 14 screws each marked red on the left and right sides, and one in the middle; cut the blue tie, unplug the connector, remove the purple marked screw to remove the upper inner cover

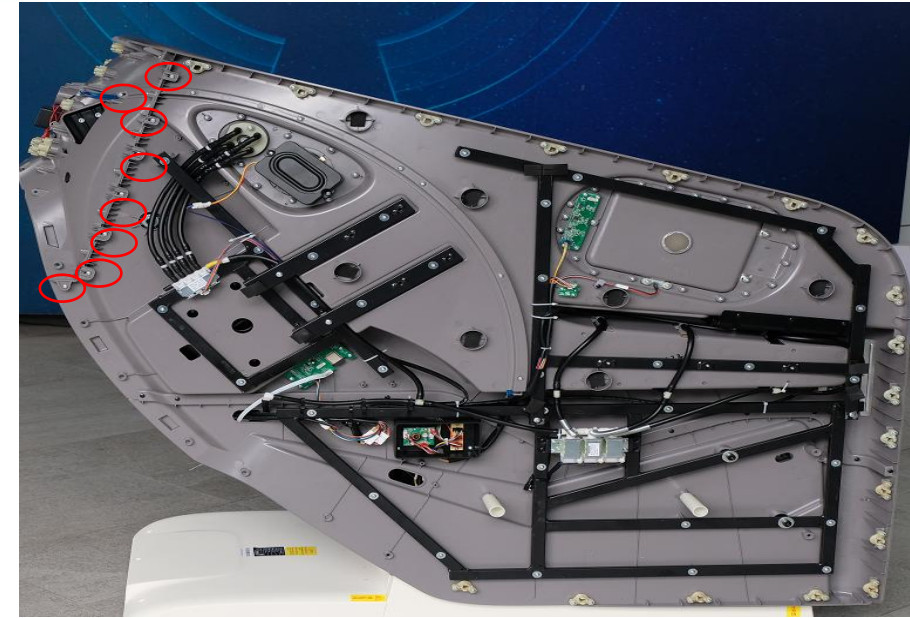


Fig. 2

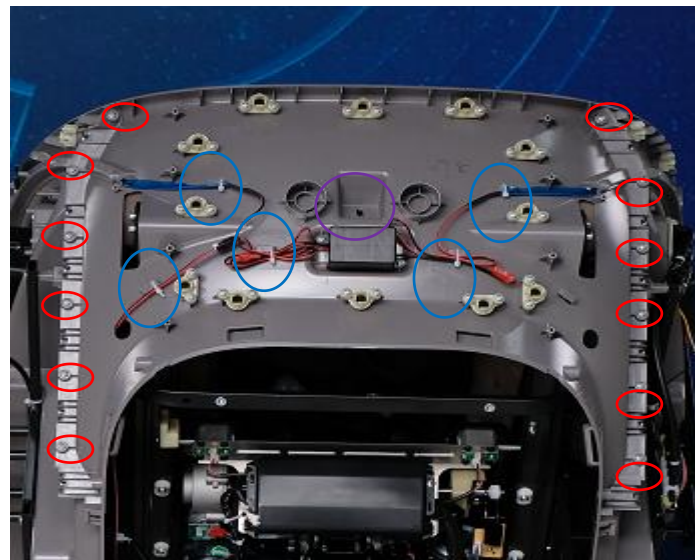


Fig.
3