



EASEPAL 厦门蒙发利电子有限公司客户服务部

5623A Massage Chair After sales Service Guide





catalogue

- 一、 Product Introduction
- 二、 Massage chair tools and usage
- 三、 Working principle of product circuit
- 四、 Internal structure and disassembly of massage chair
- 五、 Massage chair malfunction representative




EASEPAL

厦门蒙发利电子有限公司客户服务部

Product Parts

一、Product Introduction

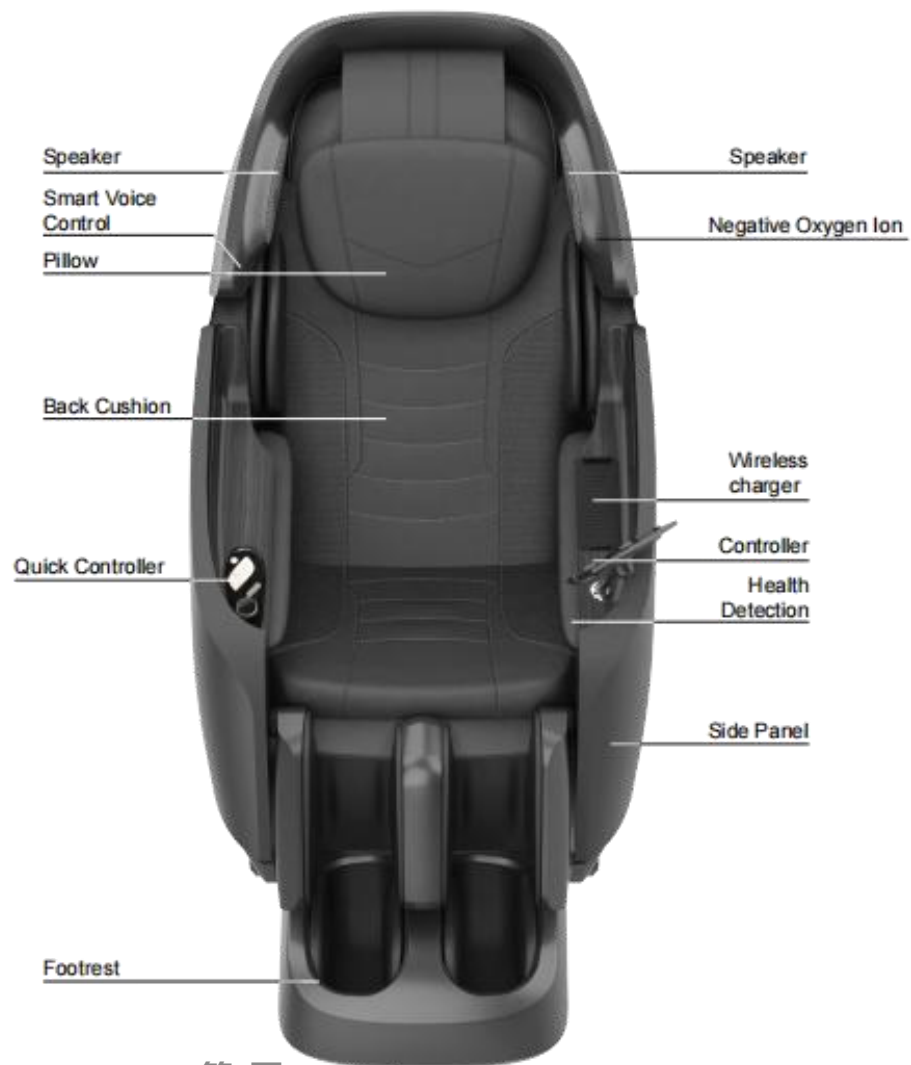



EASEPAL

厦门蒙发利电子有限公司客户服务部

Specifications

一、Product Introduction

Description	Specifications
Model No.	4D Orion Duo
Rated Voltage	110-120V~
Rated Frequency	60Hz
Rated current	2.3A
Timer	5/10/15/20/25/30 minutes
Dimension of Packing Carton(LxWxH)	Product carton: 54.3" x 33.3" x 51.6"
Weight	Product gross weight: 318.6 lbs
	Product net weight: 275.6 lbs
Dimension(LxWxH)	Upright: 61.8" x 31.5" x 49.2"
	Redine: 79.9" x 31.5" x 45.3"
Usage condition	Environment temperture: 50°F-104°F
	Contrasting humidity: 30-85RH
Storage condition	Storage temperture: 68°F-140°F
	Storage humidity level: 30-85RH
Safety feature	Equipped with overheated and power surge safety protection.
Using benefits	Increasing blood circulation; Relieving muscular fatigue

This equipment contains a certified radio transmission module:

FCC ID: YMX-ATS2853

IC: 7284A-ATS2853




二、Massage chair tools and usage

1.means of preparation

					
十字螺丝刀	老虎钳 尖嘴钳	电烙铁	扳手	电动螺丝刀	电工胶带
					
电笔	六角扳手	万用表	24V/DC电源	扎带	压线帽



2、The use and measurement of digital multimeter

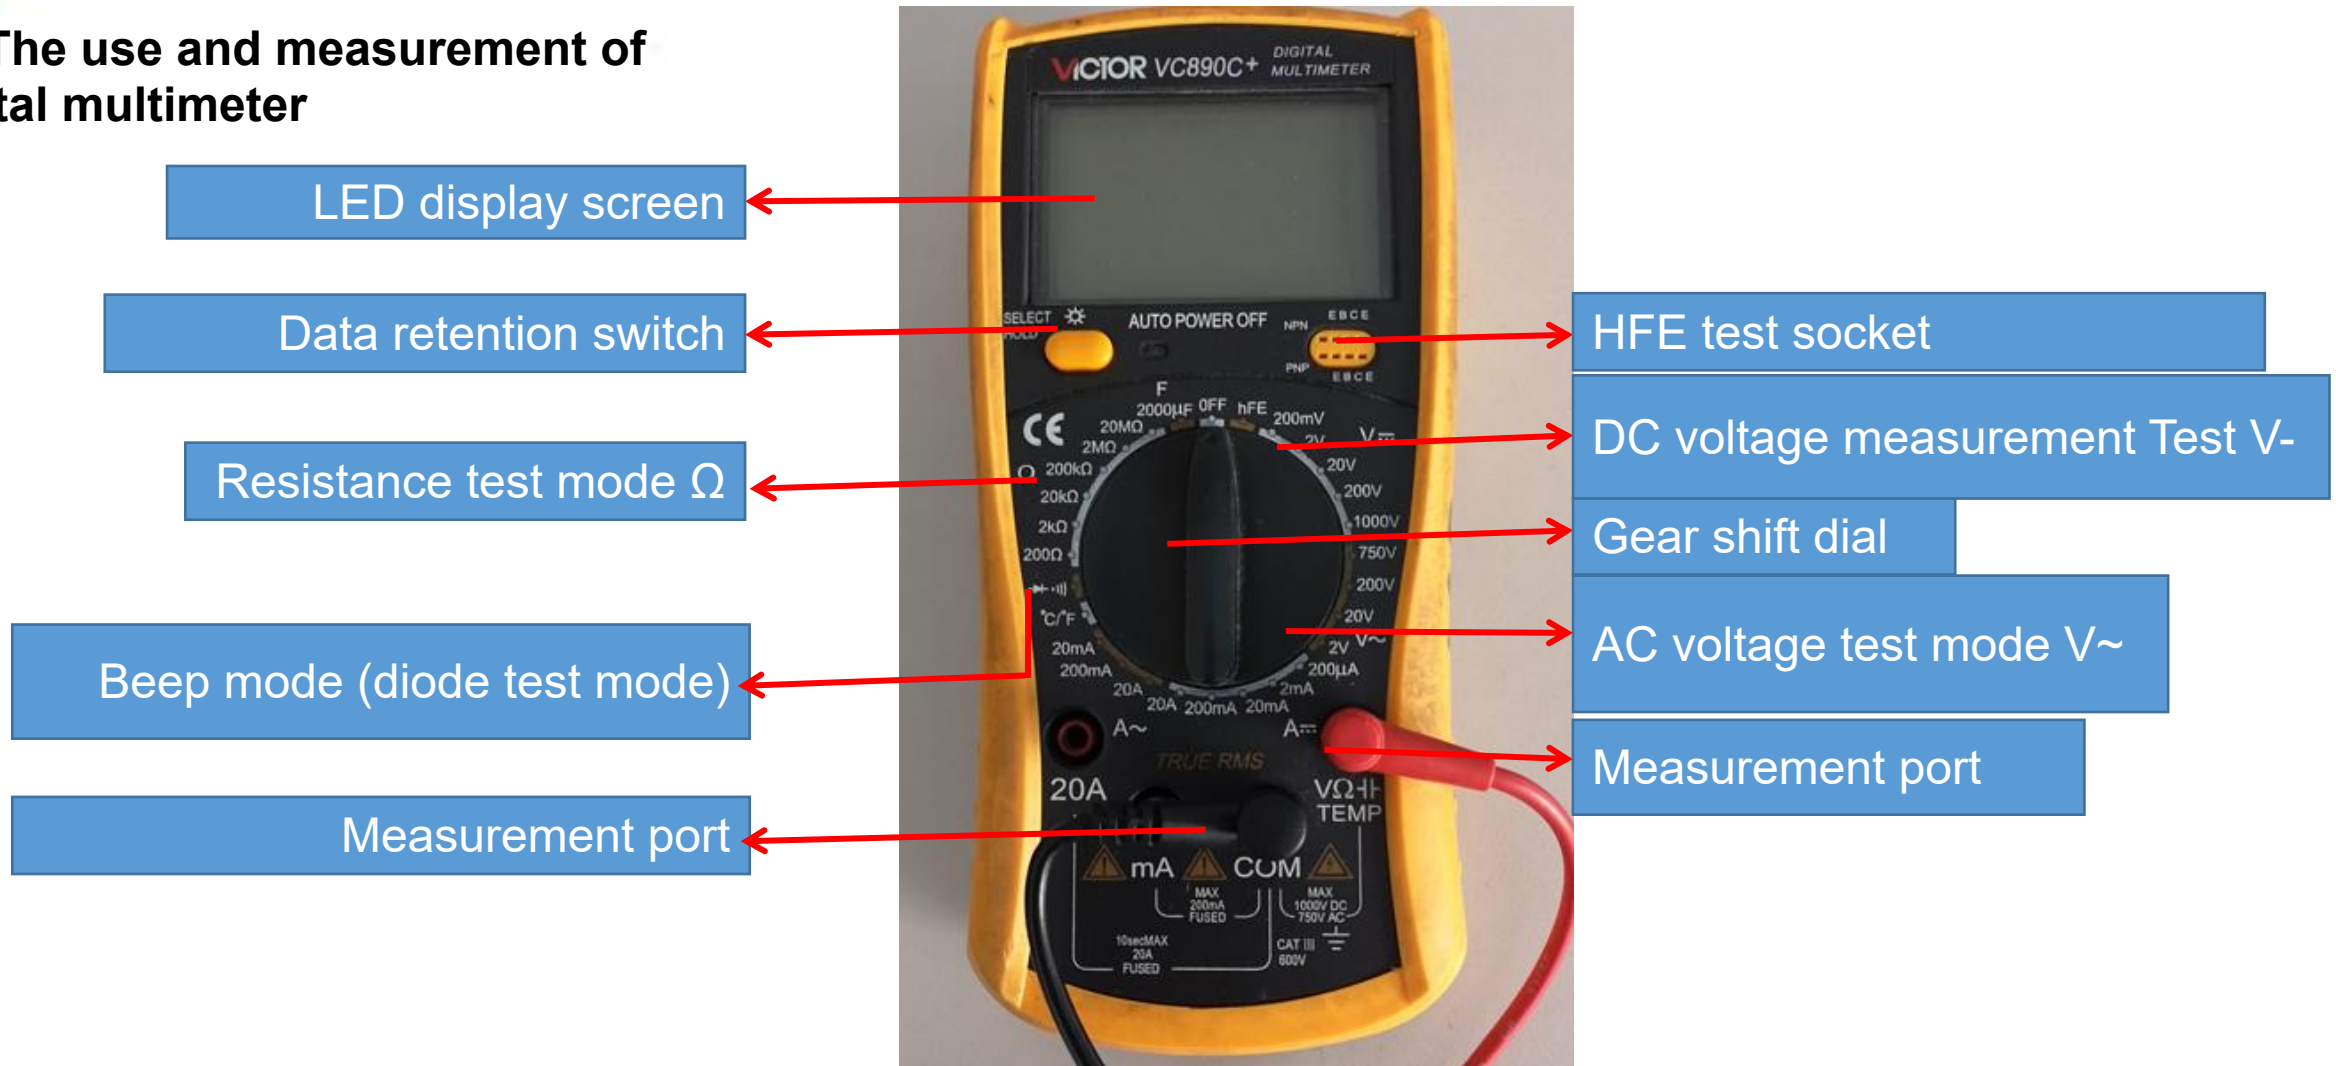

2.1 Function and Function of Test Gear

Data retention switch: Memorizes measurement data for easy comparison of test data.

Peak sound mode: measure the quality of the secondary pipe, the continuity of the circuit, and the alarm function.

Resistance test mode: measure the quality and resistance of the resistance.

DC voltage range: measure DC voltage.

AC voltage range: measure AC voltage.

VΩ / COM: VΩ Red probe port (+) during testing, black probe port (-) during COM testing

Note: When conducting resistance or voltage tests, it is necessary to choose an appropriate range. If the range is too small, it cannot be measured. If the range is too small, it cannot be measured

Large testing error range; When measuring voltage without knowing the voltage magnitude, choose a larger range for measurement.

2.2、 Measurement of line continuity/disconnection



open circuit

As shown in the left figure, first set the multimeter to beep mode and power it on

When the switch is turned on, the multimeter displays "0; Then take two of them

→ The probe contacts the metal wire ends of the red wire in the figure,

At this point, if the multimeter still shows "1." without any change, it indicates that

There is an open circuit in the middle of the wire, indicating that the circuit is not connected.



Conduction

→ As shown in the left figure, test using the same method as described above, such as displaying on a multimeter

Display the number ". 002" or ". 00N" and sound an alarm
If there is a sound, it indicates that the wire is conducting.

2.3、 Measurement of AC voltage



As shown in the above figure: Measure the household plug-in power supply (220V), select a range of 750, and test. The result shows "224", indicating that the actual voltage of this set of sockets is 224V at this moment (the switch is pressed)

Go, so there is electricity and the lights are on.



As shown in the above figure: Measure our household plug-in power supply (220V), with a range of 750, and test it. The result shows "001", indicating that the actual voltage of this socket group is 0V at this moment (the switch is not pressed,

So there's no power and the light isn't on.

2.4、 Measurement of DC voltage



As shown in the above figure, the test result shows "1.58", indicating that the voltage at both ends of this battery is 1.58V, with the red probe connected to the "+" pole of the battery and the black probe connected to the "-" pole of the electromagnetic field.



As shown in the above figure, the test result shows "-1.58", indicating that the voltage at both ends of this battery is 1.58V, with the red probe connected to the battery's "-" pole and the black probe connected to the electromagnetic "+" pole..



EASEPAL

厦门蒙发利电子有限公司客户服务部

3、 Working principle of product circuit

1、 Physical wiring diagram of the center board:




EASEPAL

厦门蒙发利电子有限公司客户服务部

3、 Working principle of product circuit

2. Wiring diagram of switch power board:

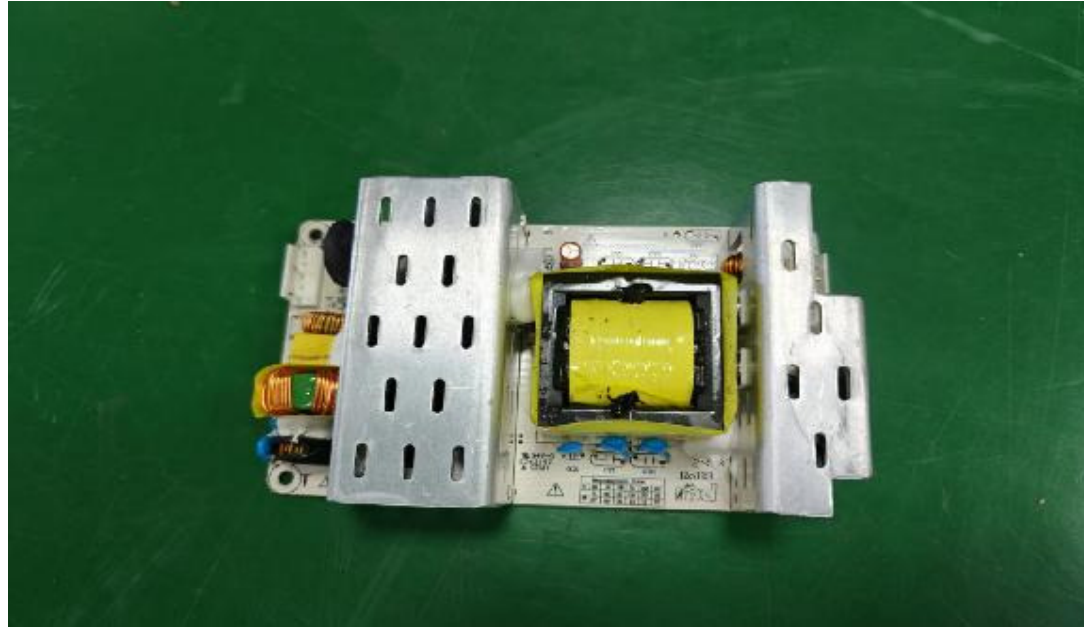




EASEPAL

厦门蒙发利电子有限公司客户服务部

3、 Working principle of product circuit

3, Bluetooth amplifier board wiring diagram:

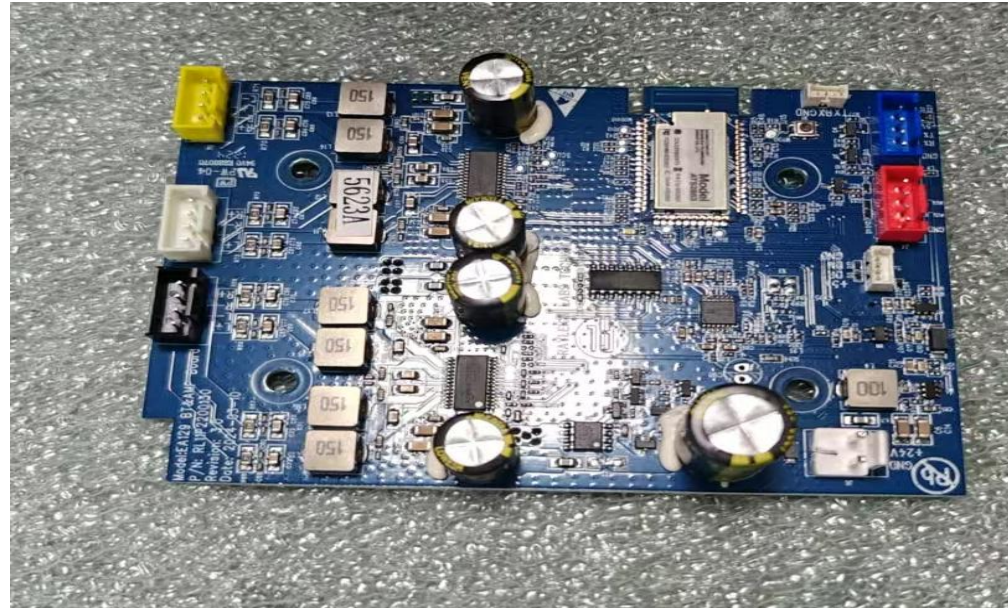




4、 Internal structure and disassembly of massage chair

1、 Internal structure diagram:

1.1、 Internal structure diagram (host):

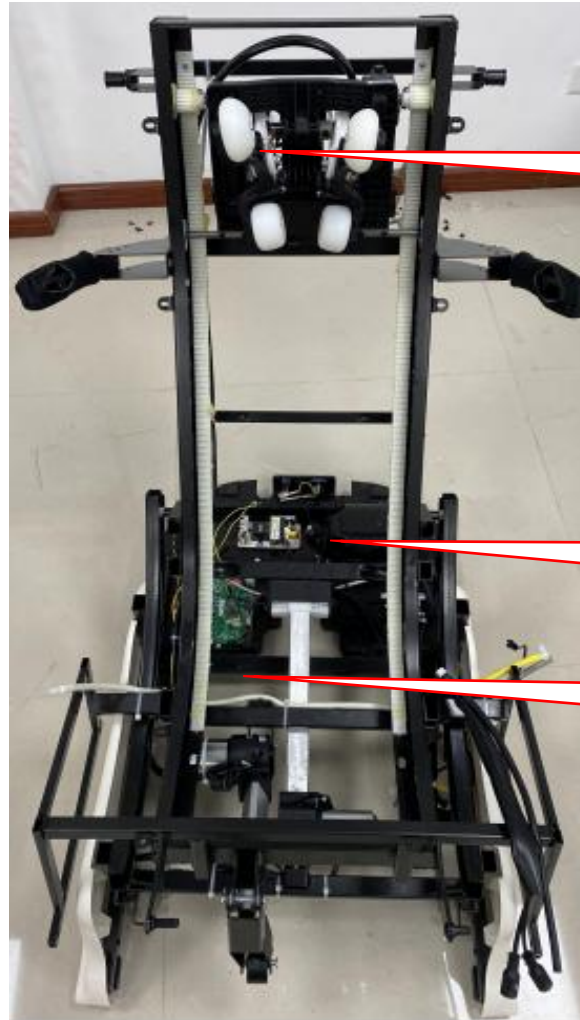


Massage mechanism

Center Box

Backrest push rod



1.2、 Internal structure diagram (center box):

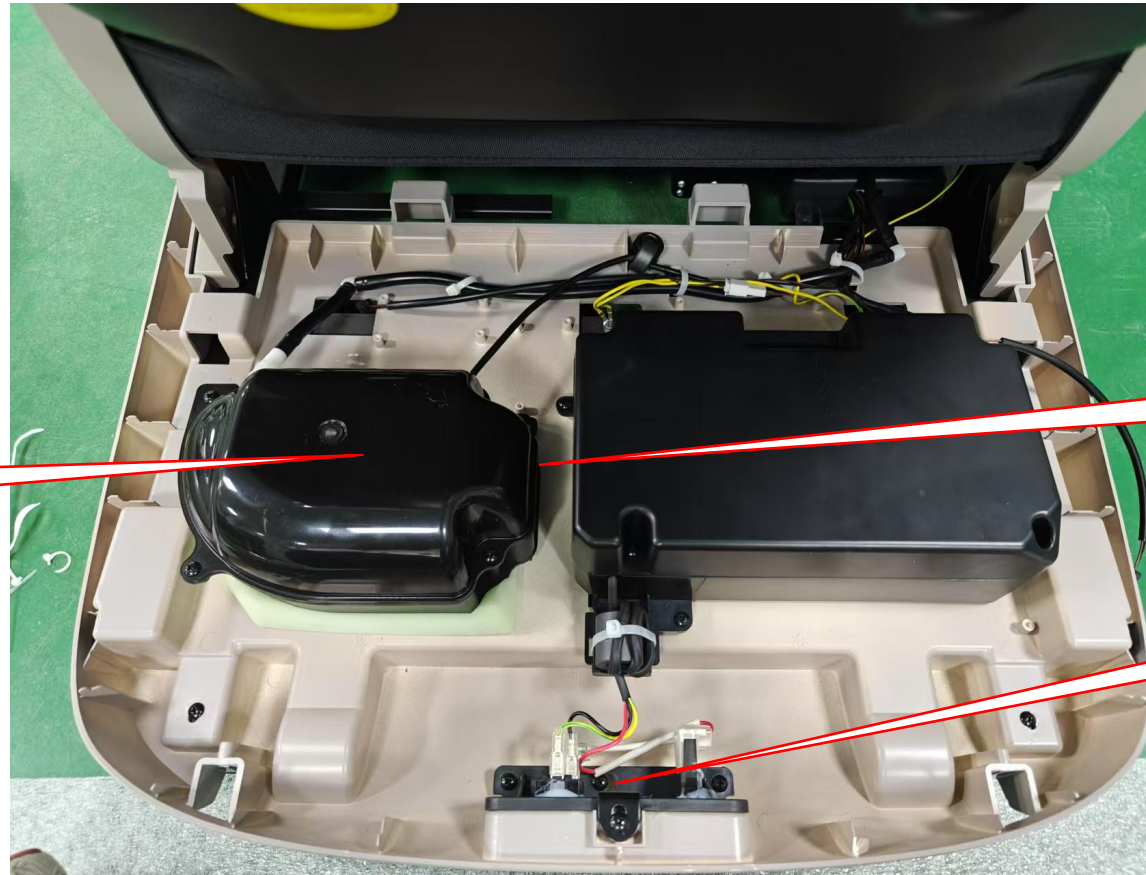


Air pump box

Switching power board

Switch panel



2、 Schematic diagram of calf structure:

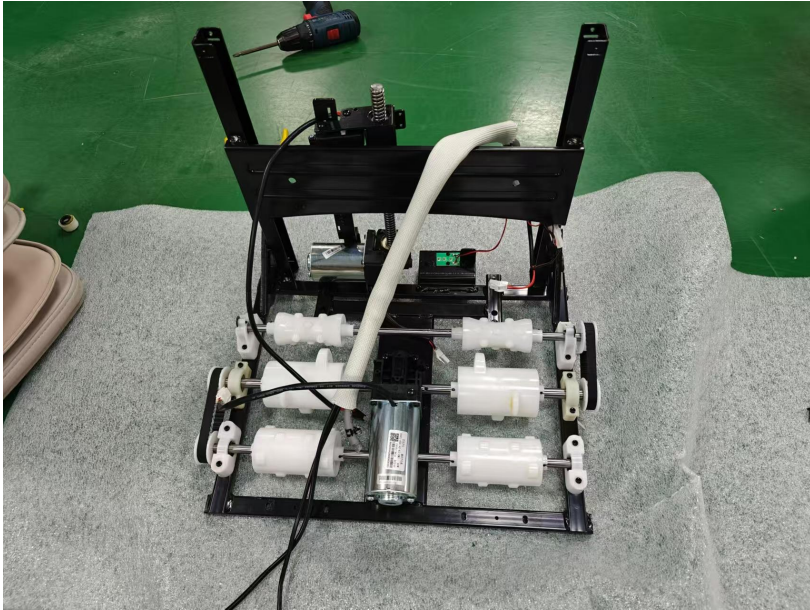

Calf hardware and foot roller components




Calf component



EASEPAL

厦门蒙发利电子有限公司客户服务部

3.Pillow disassembly instructions:

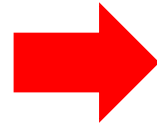

Open the zipper and remove the pillow


pillow




4, Instructions for disassembling the cloak cushion:



Open the zipper

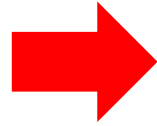


Open the zipper connecting the calf

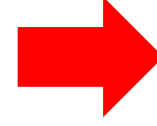


Open the left and right zippers



Cut off the zip ties and heat shrink tubing

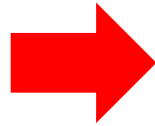

Open the left and right zippers

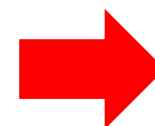


Remove the cloak cushion





5, Disassembly instructions for left and right side panel components:




Remove the two fixing screws

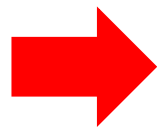


Remove the four fixing screws

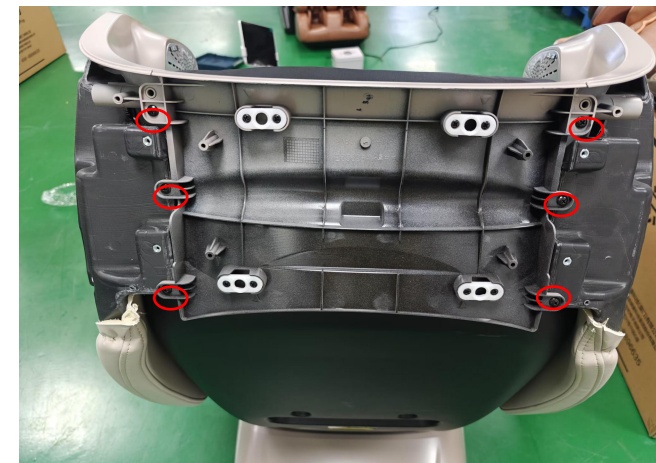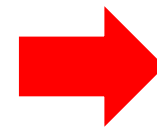

Remove 4 screws

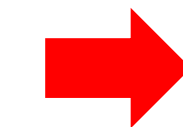

Remove the left decorative piece (remove the right side as the left side)

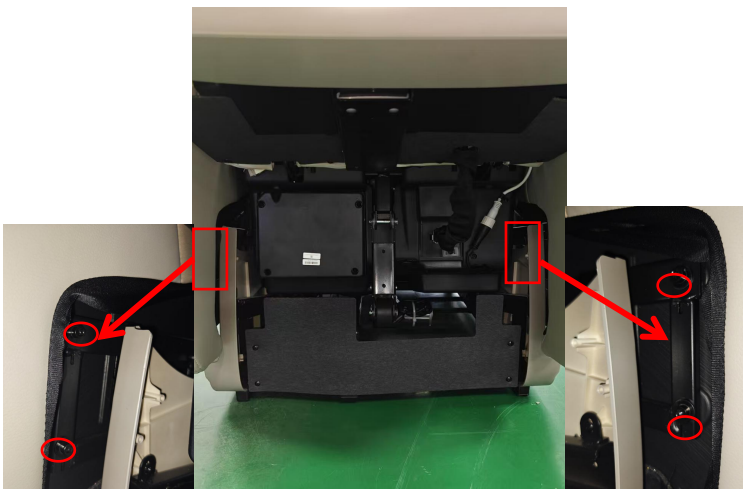





Lift the calf and remove 2 screws on each side



Remove the four screws and remove the backrest back cover




5, Disassembly instructions for left and right side panel components:

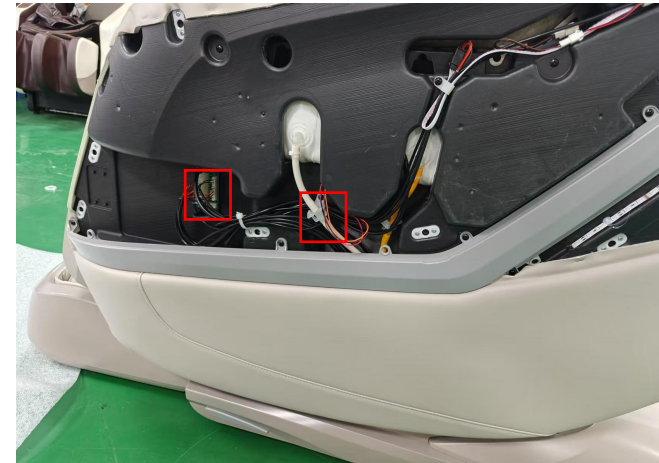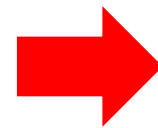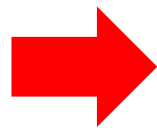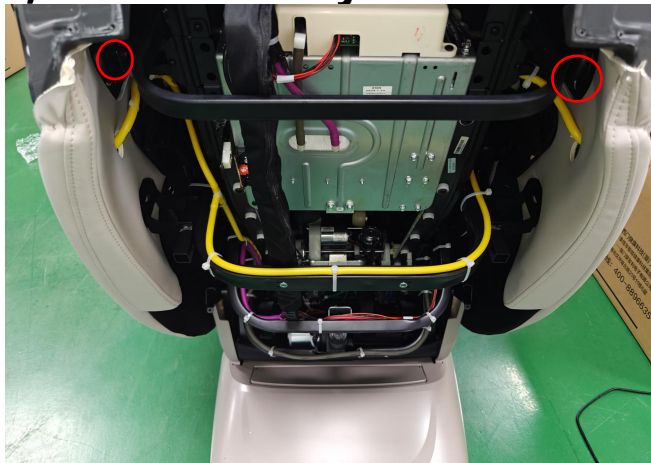


Remove the fixing screws of the left and right side panels

Lift the side panel upwards, cut off the zip ties, and remove the trachea

Unplug all connected terminals and air tubes, and remove the left side panel

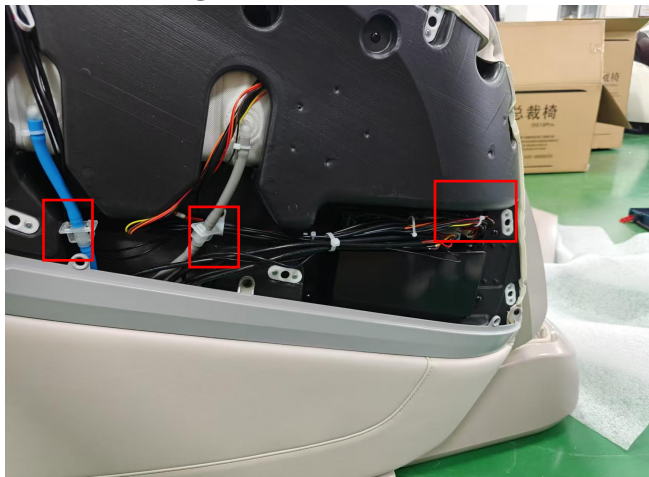

Unplug all connected terminals and air tubes, and remove the right side panel




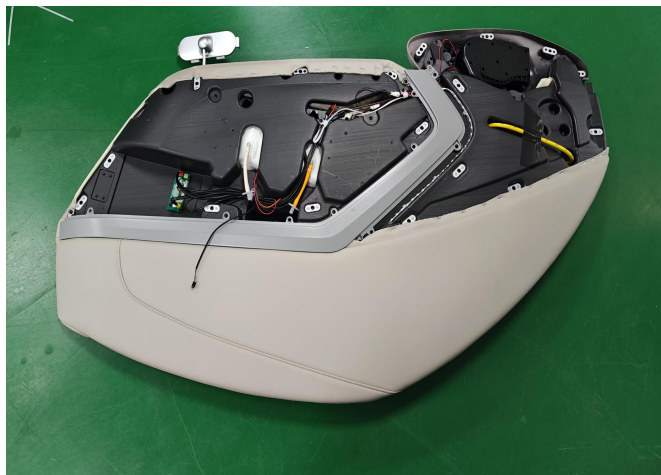


Left side panel



Right side panel




5.1, Internal disassembly instructions for side panel components: disassembly instructions for armrest leather cover, airbag, and soreness detection handle. Demonstrate the disassembly of the armrest on the left side panel component, and the disassembly of the right side panel should be consistent

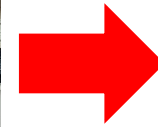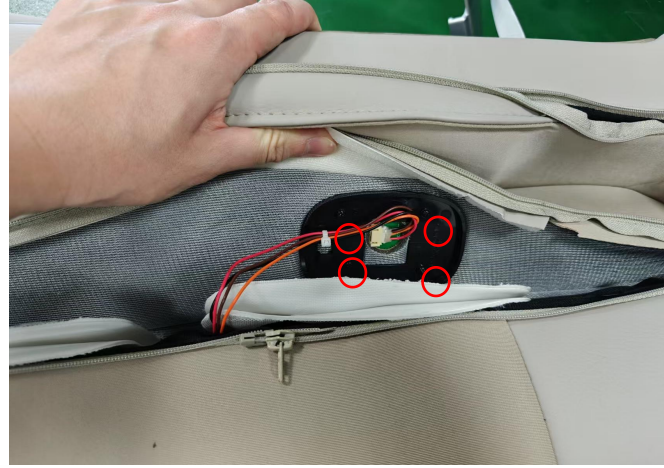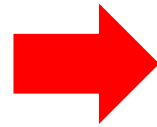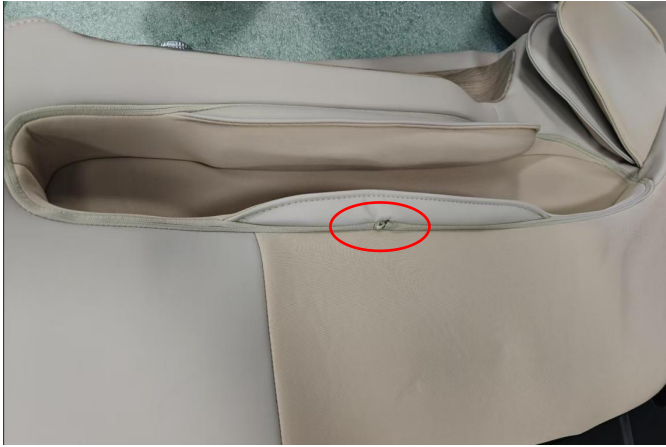

Open the zipper and remove the arm leather cover

Remove 4 screws, cut off the zip ties, and unplug the terminals

Remove the soreness detection handle

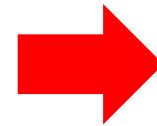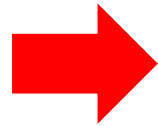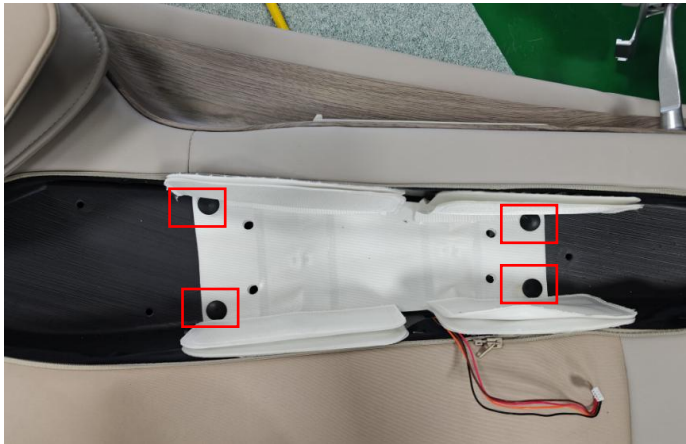

Remove 4 screws and unplug the trachea

Remove the airbag

After removing the fixing nut, take off the controller bracket



5.1, Internal disassembly instructions for side panel components: disassembly instructions for armrest leather cover, airbag, and soreness detection handle. Demonstrate the disassembly of the armrest on the left side panel component, and the disassembly of the right side panel should be consistent





Hand controller bracket




5.2, Internal disassembly instructions for side panel components: disassembly instructions for side panel decorative parts and speakers. Demonstrate the left side panel component, and ensure consistent disassembly of the right side panel



Remove the screws and remove the decorative parts

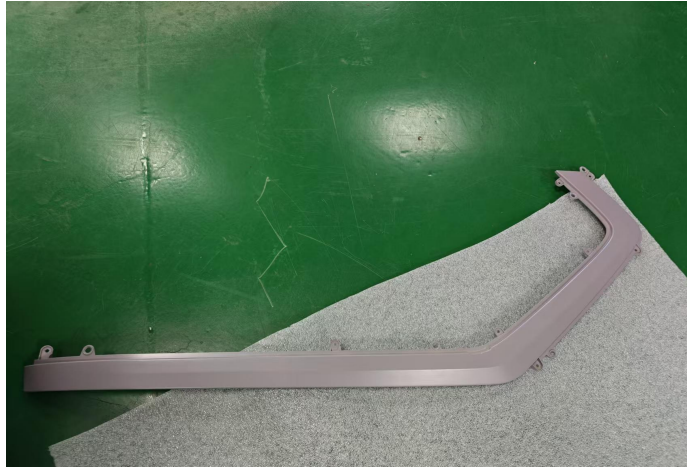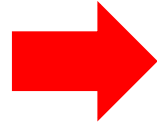


Side panel decorative parts

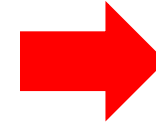



Remove the screws



Remove the horn component

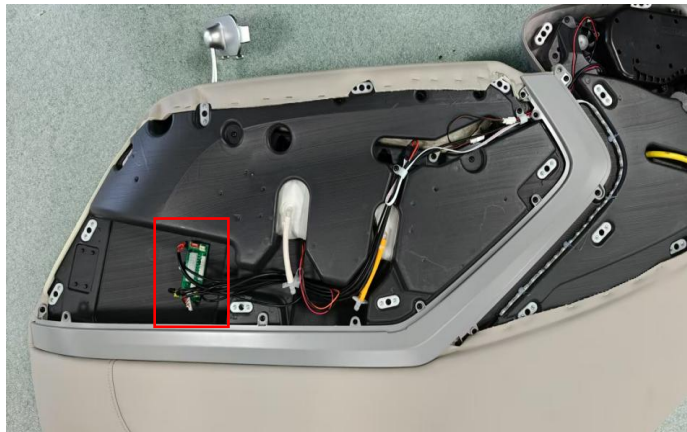

Unplug the terminal and remove the side panel adapter board

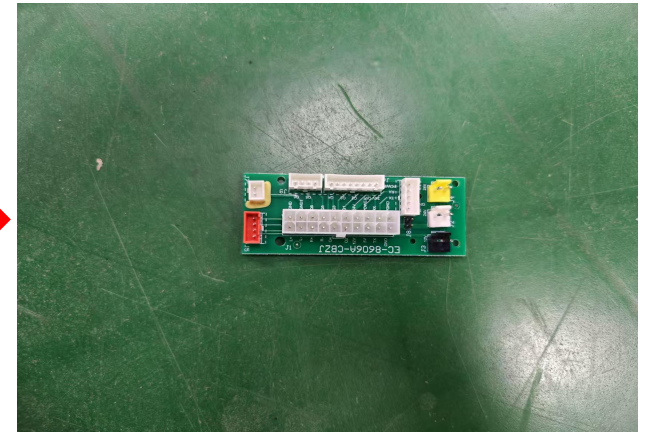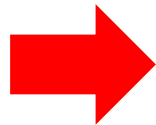


Left side panel adapter board




6, Disassembly instructions for Bluetooth amplifier board, note: Refer to (5 disassembly instructions for left and right side panel components) to remove the right side panel component




Remove 4 cross screws from 4 boards and unplug the terminals

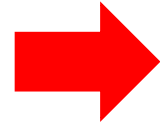



Bluetooth board

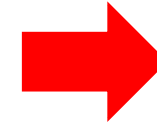

Song storage board

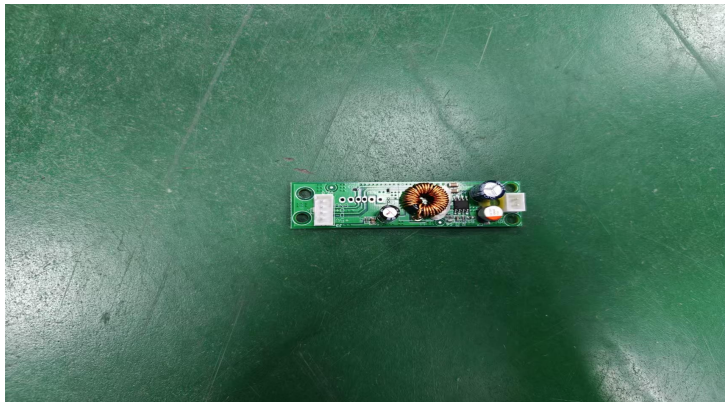

USB charging pad

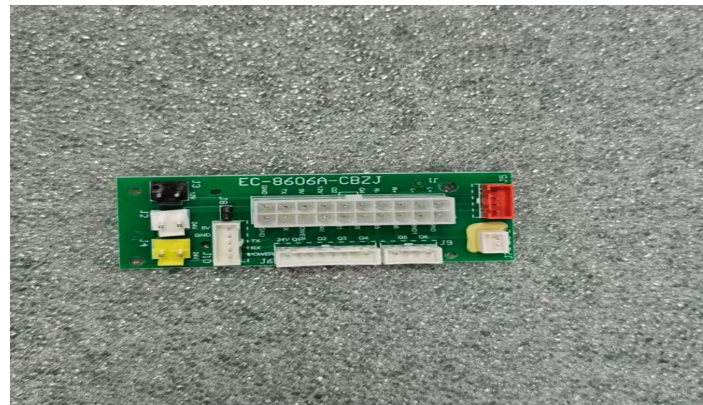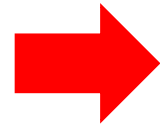


Right adapter board



7, Instructions for disassembling the soreness detection board: Note: Refer to (5 Instructions for disassembling the left and right side panel components) to remove the left side panel component



Remove one screw and disconnect one terminal

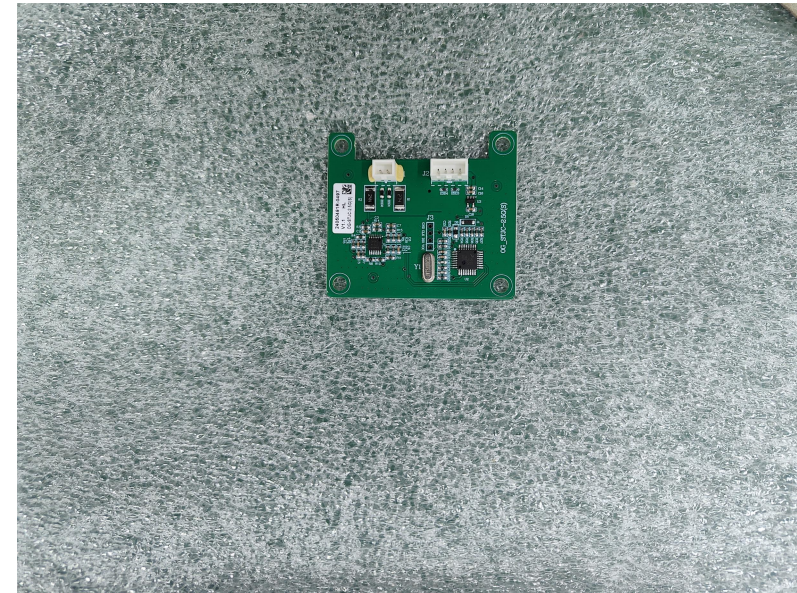


Remove the soreness detection board




8, Disassembly instructions for left and right shoulder leather covers: Note: Refer to (5 Disassembly instructions for left and right side panel components) to remove the left and right side panel components



Tear open the magic buckle and remove it (2 screws on each side)

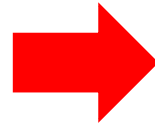


Pull out one trachea on each side to remove the left and right shoulders

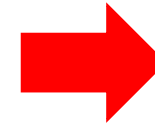


Remove the two screws on the right shoulder



Right shoulder airbag and jacket

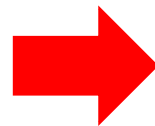

Remove the two screws on the left shoulder

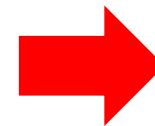

Left shoulder airbag and jacket



9, Manual controller disassembly instructions: Note: Refer to (5 disassembly instructions for left and right side panel components) to remove the right side panel component



Cut off the cable tie and unplug one terminal



Remove the controller



EASEPAL


厦门蒙发利电子有限公司客户服务部

10, Disassembly instructions for movement components:



Please note that the cloak pillow should be disassembled first (refer to 3 and 4)



Remove 4 screws and take off the backrest back cover

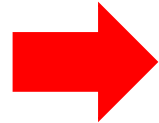


Remove the 6 screws securing the front backrest

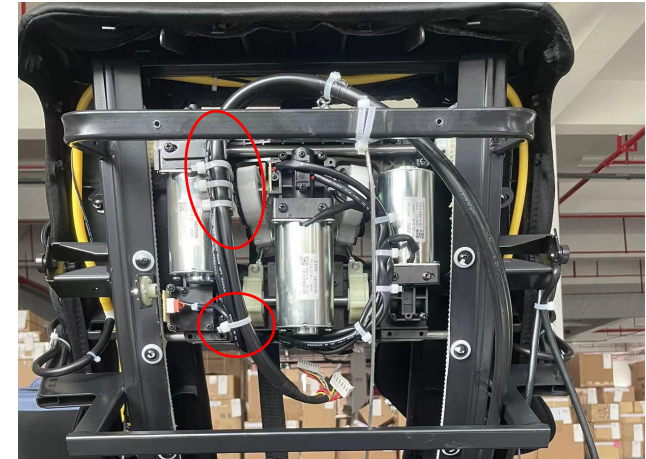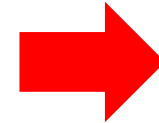


Cut off the zip ties



Remove one screw

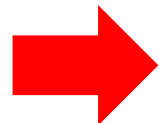


Use a small zip tie to unzip the fleece fabric

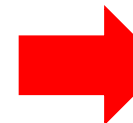



Remove the 3 screws on the upper cover of the movement adapter plate





10, Disassembly instructions for movement components: Please note that the cloak pillow should be disassembled first (refer to 3 and 4)

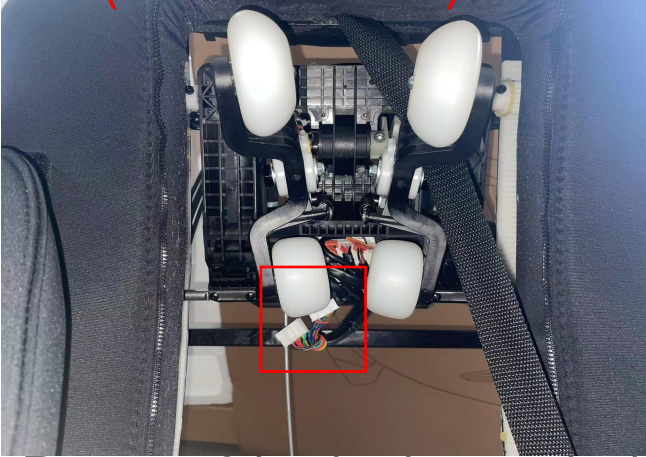


Remove 2 back wire terminals

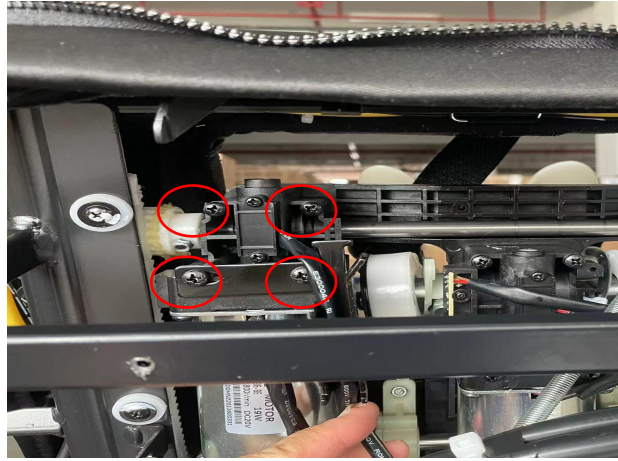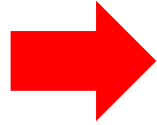

Remove the 4 screws of the walking motor, be careful that the movement will fall down

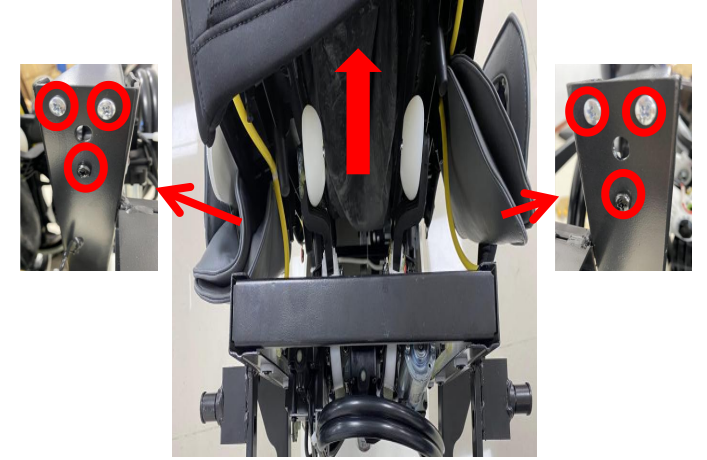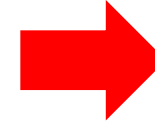

Push the front backrest forward to a certain angle to ensure there is enough space to remove the movement. Remove the 4 screws and 2 anti-collision screws that fix the crossbeam (a total of 6 screws on both sides)

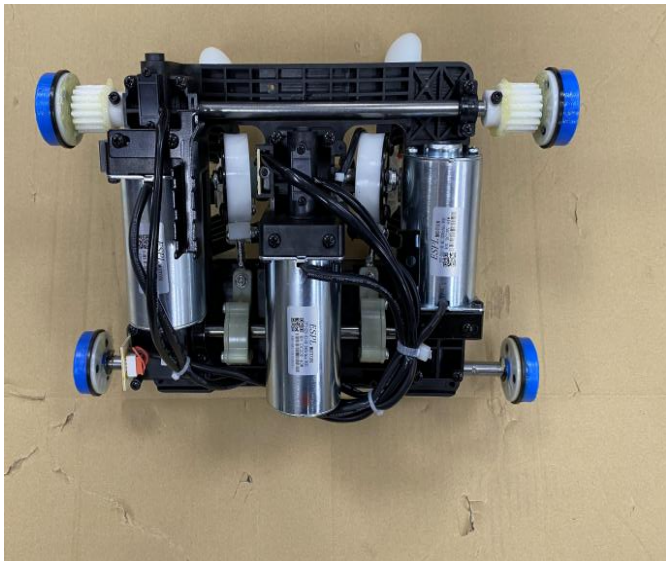



Remove the movement





11. Instructions for disassembling the back wire: Note that the cloak pillow should be disassembled first (refer to 3.4)



Remove 4 screws and take off the backrest back cover

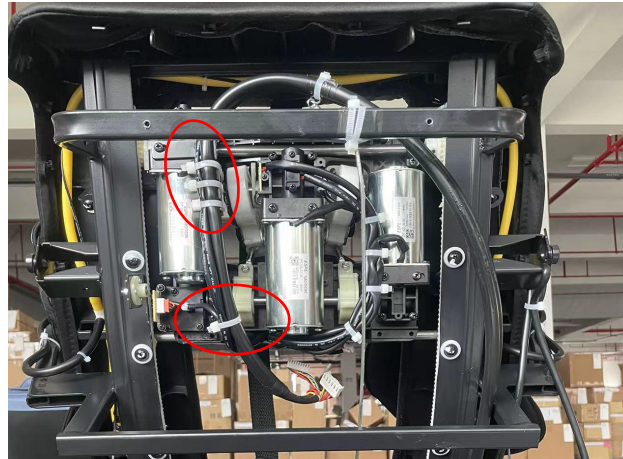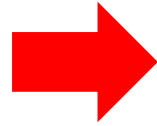


Cut off the zip ties

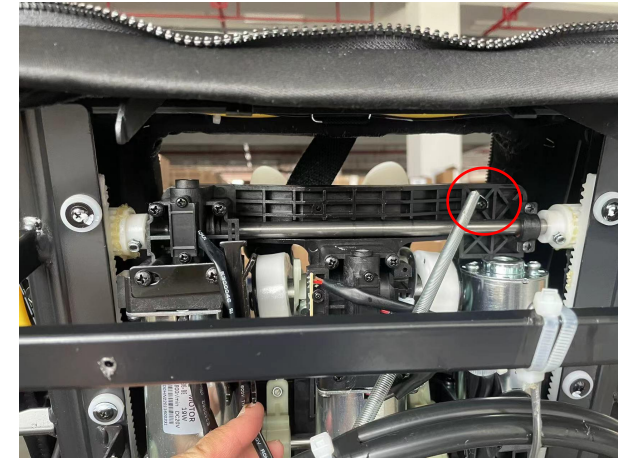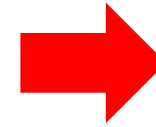



Remove one screw



Use a small zip tie to unzip the fleece fabric

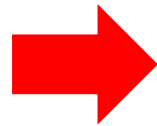

Remove the 3 screws on the upper cover of the movement adapter plate

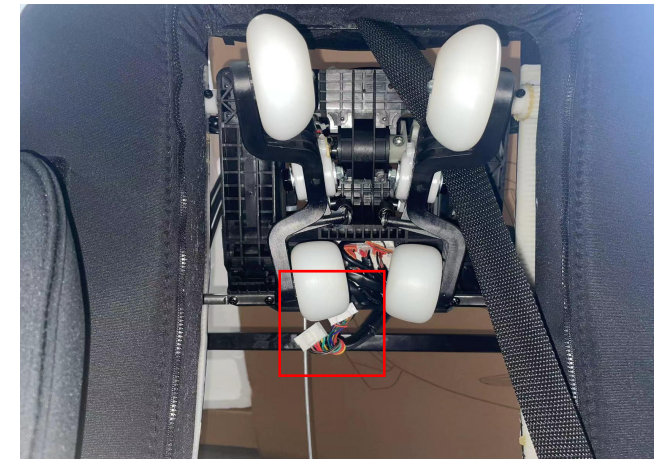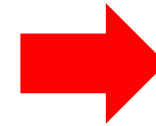


Remove 2 back wire terminals





11. Instructions for disassembling the back wire: Note that the cloak pillow should be disassembled first (refer to 3.4)




Remove 2 screws and take off the top cover of the center box

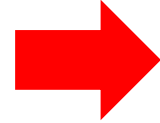



Cut off the backrest wire cable tie

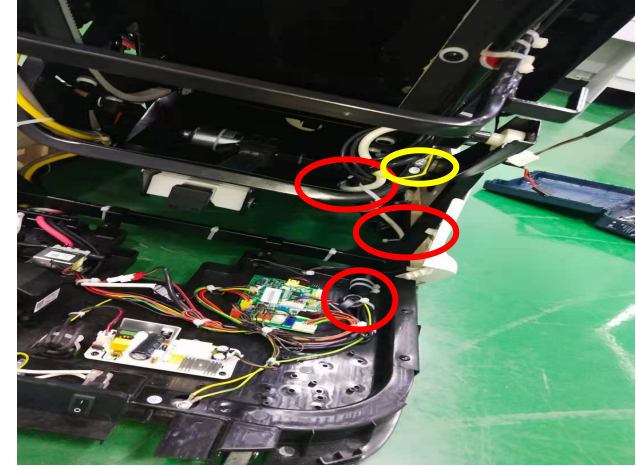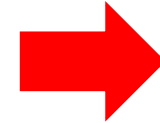

Cut off the red marked buckle and the yellow marked ground screw

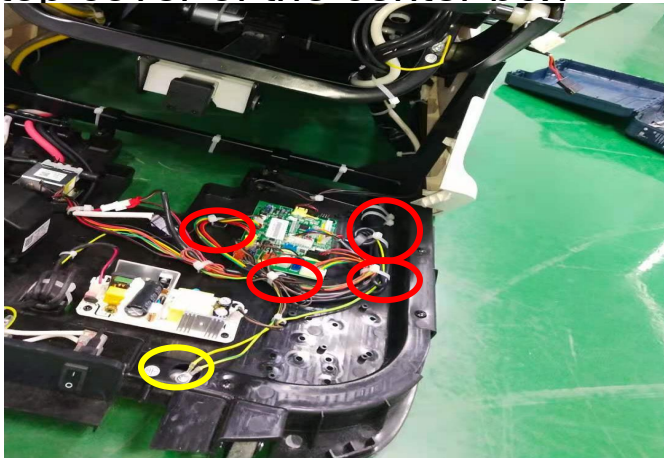

Cut off the red marked buckle, remove the yellow marked ground screw, and unplug the terminal

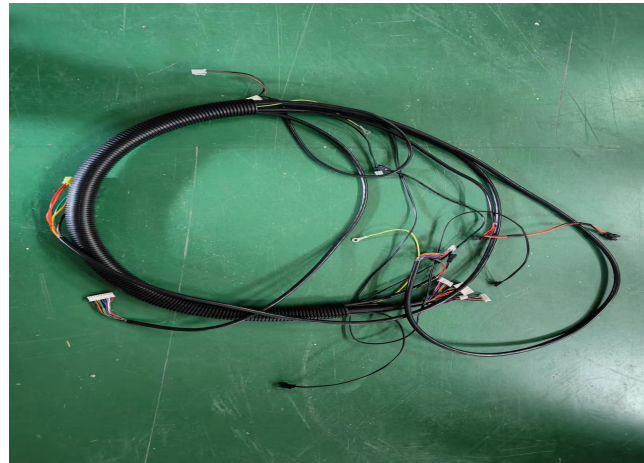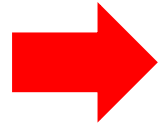


remove the backrest cable




12, 机芯转接板的拆卸: **注意, 先拆卸披风枕头 (参考3.4)**



Use a small zip tie to unzip the

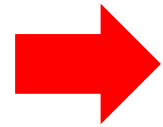


Remove the 3 screws on the upper cover of the movement adapter plate

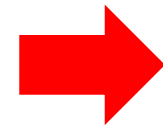

Remove all terminals from the adapter board of the movement



Remove 2 screws

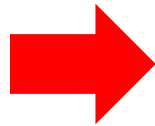


Remove the adapter plate of the movement





13, 机芯上下行程检测板拆卸说明:



Remove 4 screws and take off the backrest back cover

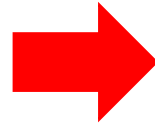

Remove 2 screws and unplug the terminals

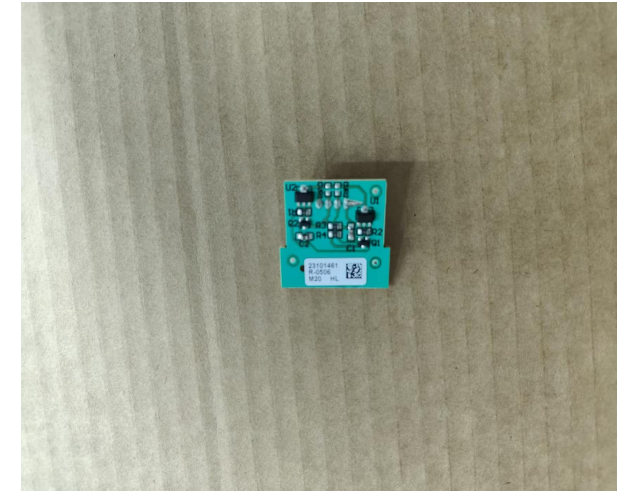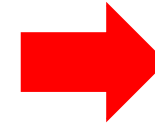

Remove the up and down travel detection board





EASEPAL

厦门蒙发利电子有限公司客户服务部



14. Internal disassembly instructions for the center box component:




Remove 2 screws and take off the top cover of the center box

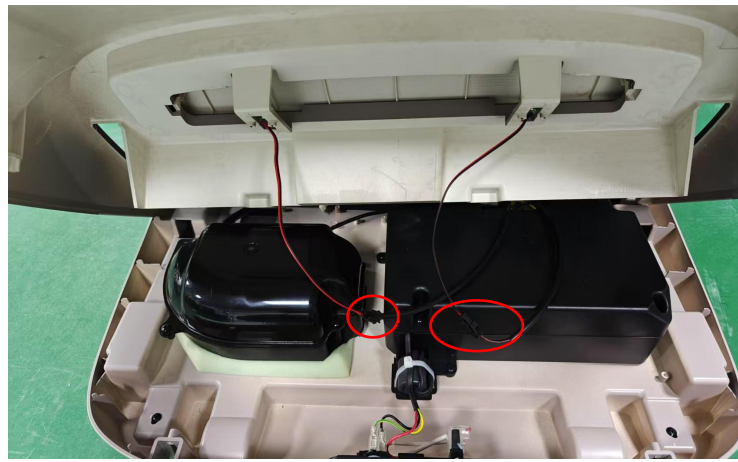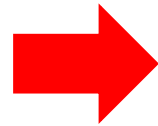



Remove 2 terminals

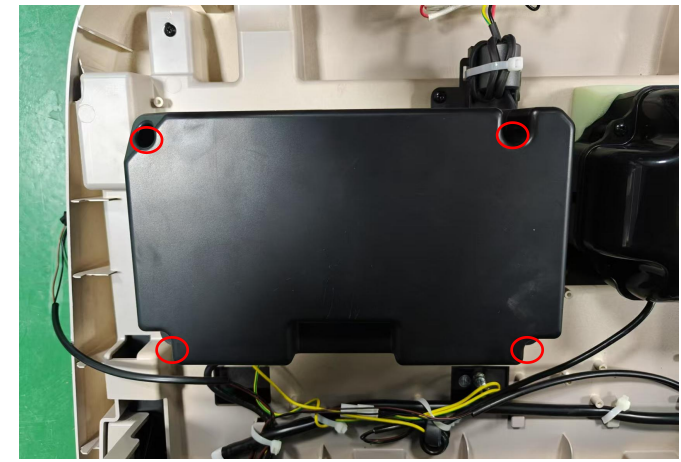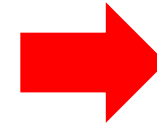


Remove 4 screws and take off the cover

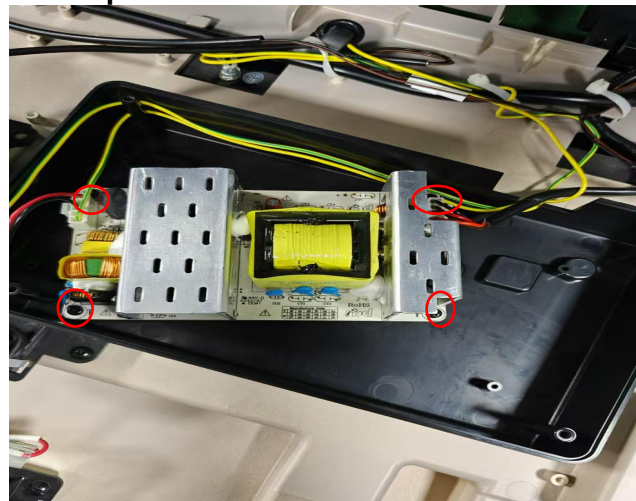

Remove 4 screws and disconnect 2 terminals

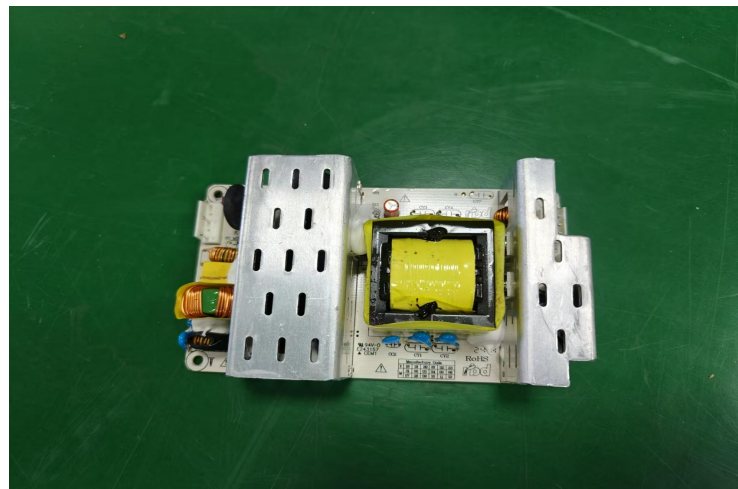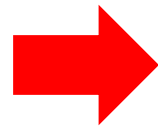



Remove the switch power board

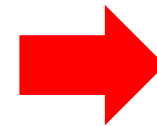

Remove 5 screws and take off the cover



14. Internal disassembly instructions for the center box component:

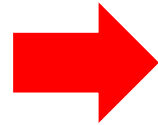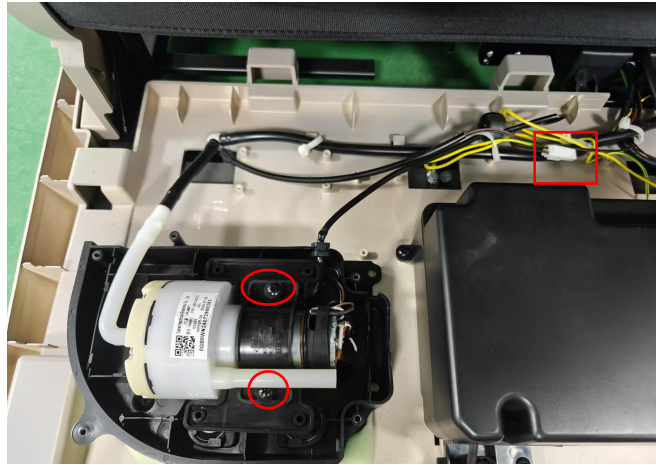

Remove 2 screws, unplug 1 trachea, cut off the zip tie, and unplug 1 terminal


Remove the air pump




15, Disassembly instructions for calf components:



Open the zipper

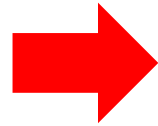

Open the zipper

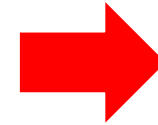


Remove the trachea and terminals





Remove the calf component





15.1 Instructions for disassembling upper and lower legs:

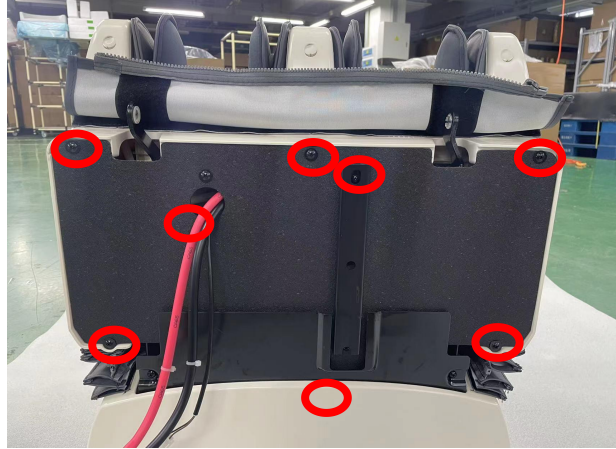


Remove 8 screws and take off the upper leg shield

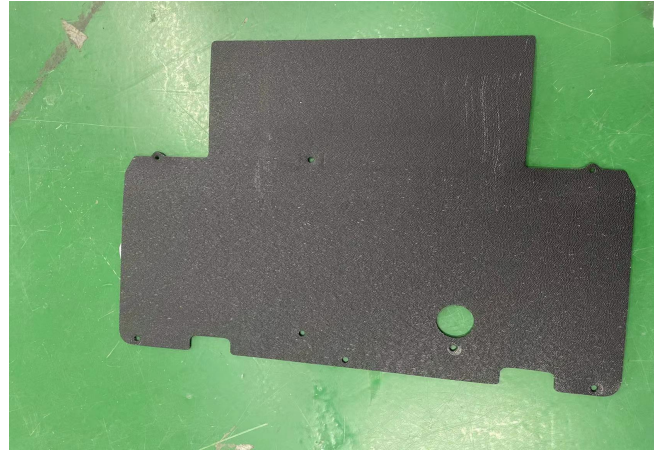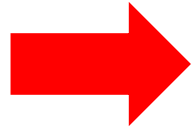



Remove the baffle

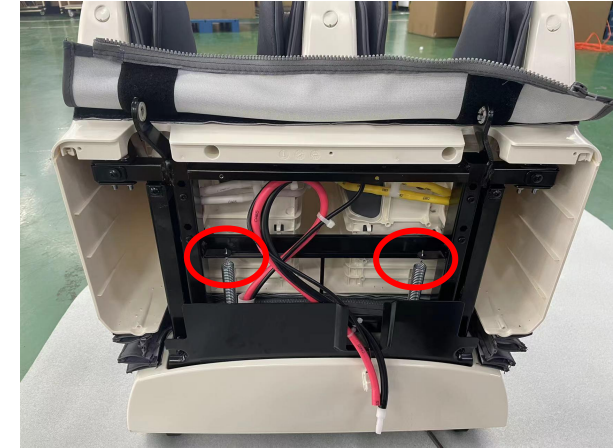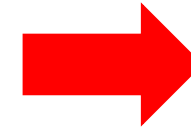


Remove 2 tension springs

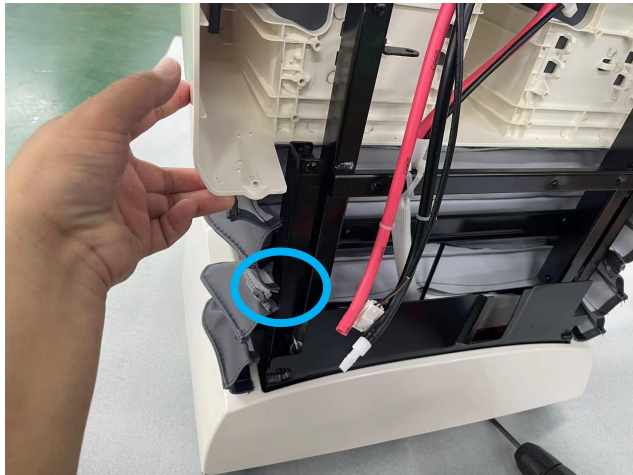

unzip the zip of feet

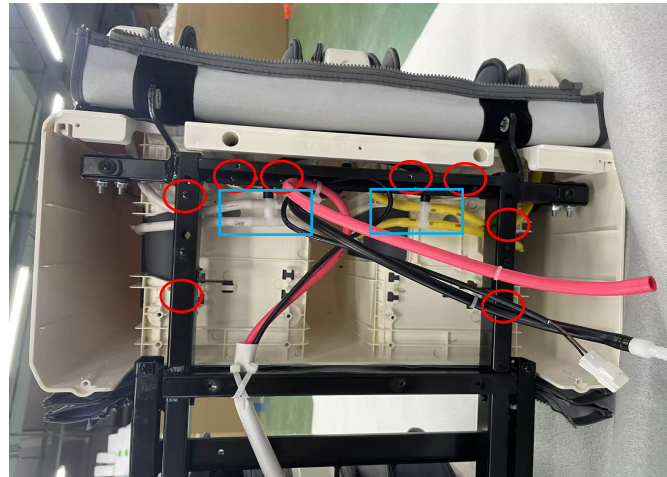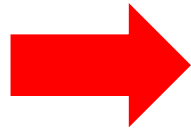


Remove 8 screws and disconnect 8 air tubes on both sides

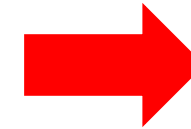


Pick out 3 plugs and remove 5 screws




15.1 Instructions for disassembling upper and lower legs:

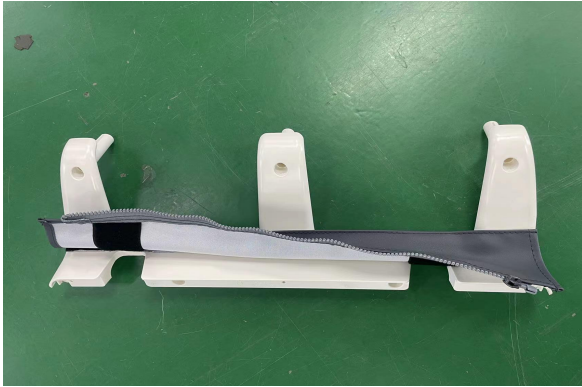

Remove the upper leg cover

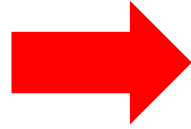

Open the zippers on both sides

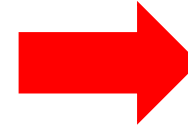

Remove a total of 8 screws on the left and right sides



Remove the upper and lower leg components




EASEPAL

厦门蒙发利电子有限公司客户服务部


15.2. Internal disassembly instructions for upper leg components: disassembly instructions for upper leg airbags and leather covers



Open the zipper

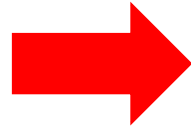



Remove a total of 8 screws on the left and right sides

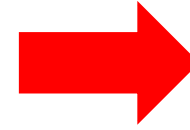

Remove the airbag






Remove the airbag

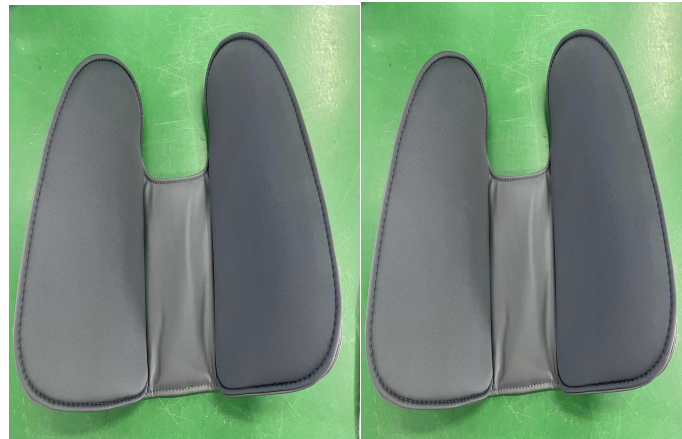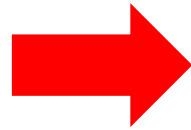

Take out the jacket





15.3, Instructions for disassembling the lower leg:

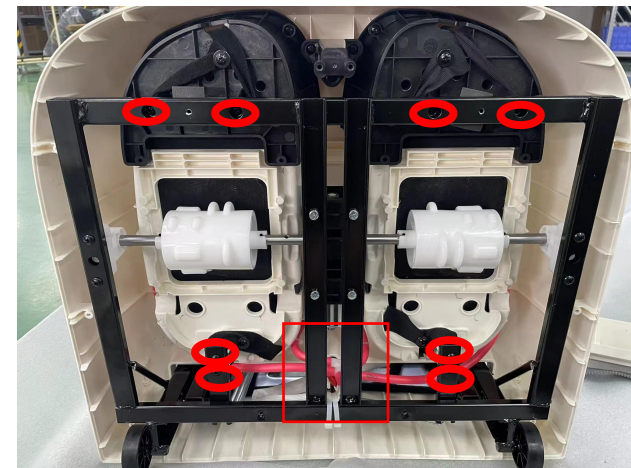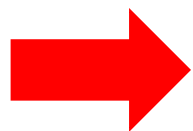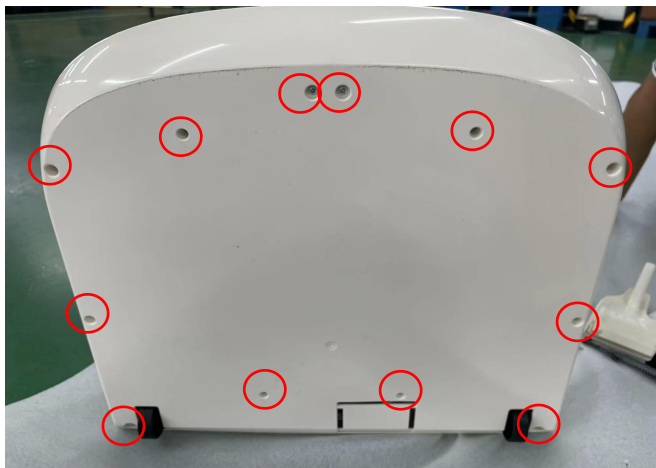

Remove the 12 screws and remove the airbag

Remove the calf bottom cover

Remove 6 screws and disconnect 4 air tubes

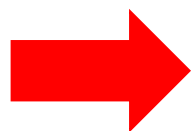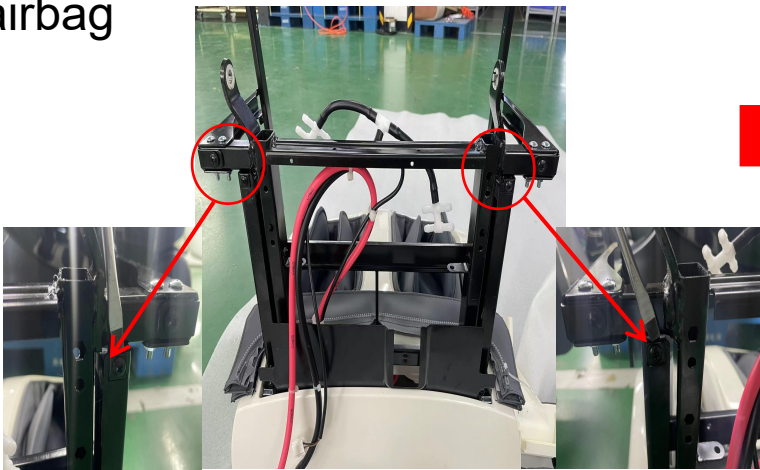

Remove 2 screws, pry open the stopper, cut off the zip tie, and remove the plug and iron


Remove the lower leg component




EASEPAL

厦门蒙发利电子有限公司客户服务部


15.4, Internal disassembly instructions for lower leg component: disassembly instructions for lower leg airbag and leather cover (demonstrating the same disassembly for left and right legs)

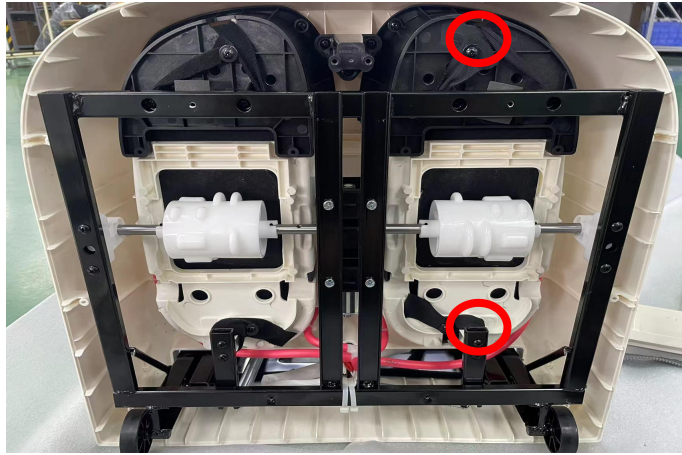


Remove 2 screws

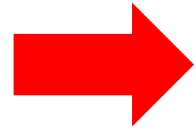


Open the zipper

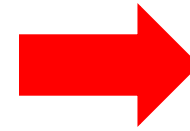

Take out the calf jacket

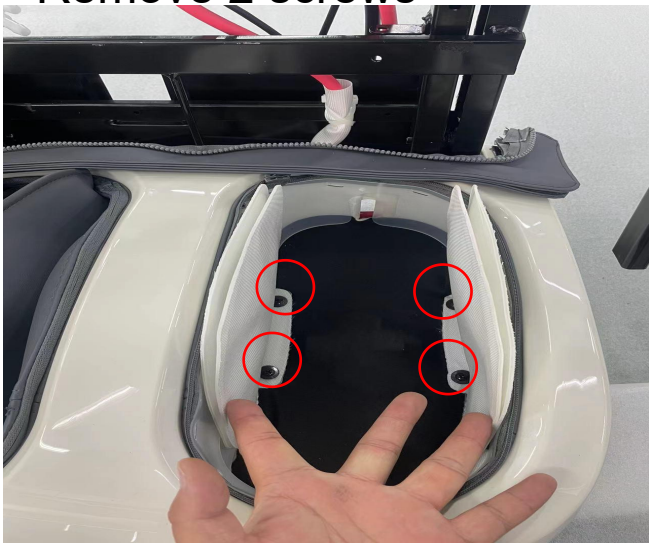

Remove 4 screws

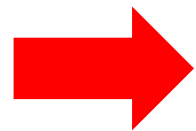

Remove the calf airbag





EASEPAL

厦门蒙发利电子有限公司客户服务部



15.6, Internal disassembly instructions for lower leg component: disassembly instructions for lower leg airbag and leather cover (demonstrating the same disassembly for left and right legs)



Remove 12 screws

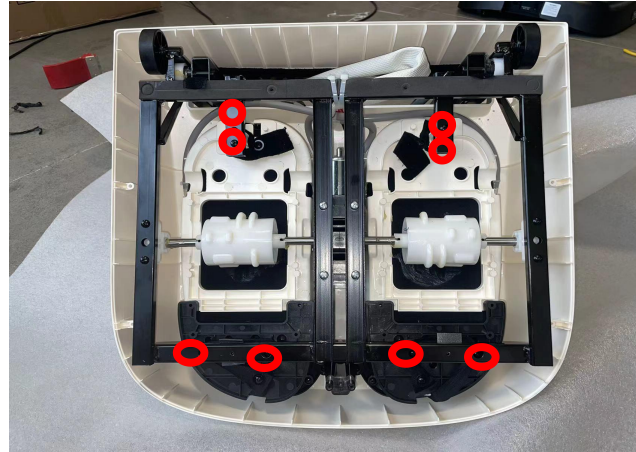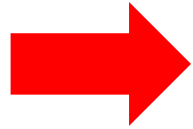

Remove 16 screws

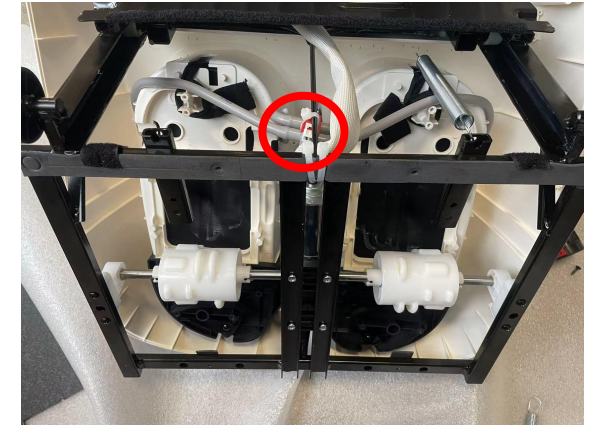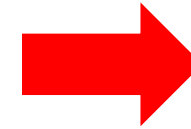

Cut off the buckle and unplug one terminal



Remove the calf and roll the foot





EASEPAL

厦门蒙发利电子有限公司客户服务部


16, Instructions for disassembling the backrest push rod: To remove the flat push rod, one person needs to lift the backrest from behind to prevent injury! Refer to (15 calf component disassembly instructions) to remove the calf component




Remove 4 screws and take off the front windshield cloth

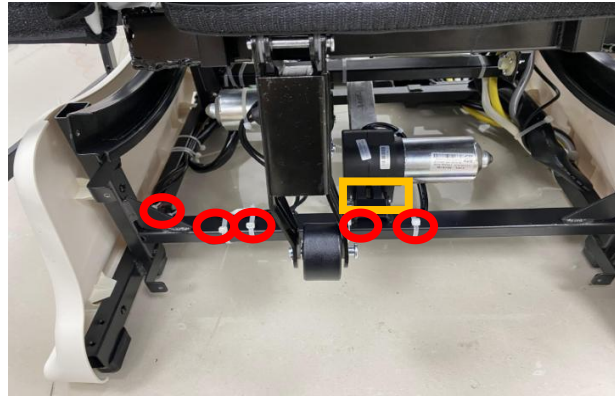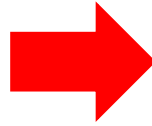



Remove the yellow marked pins and shafts, and cut off the red marked buckles

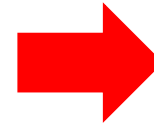

Unplug two terminals

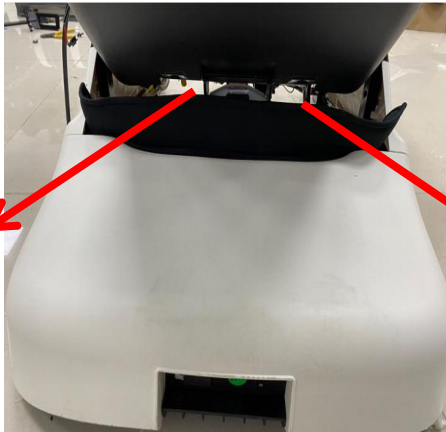

Remove 2 hex screws and remove the backrest push rod

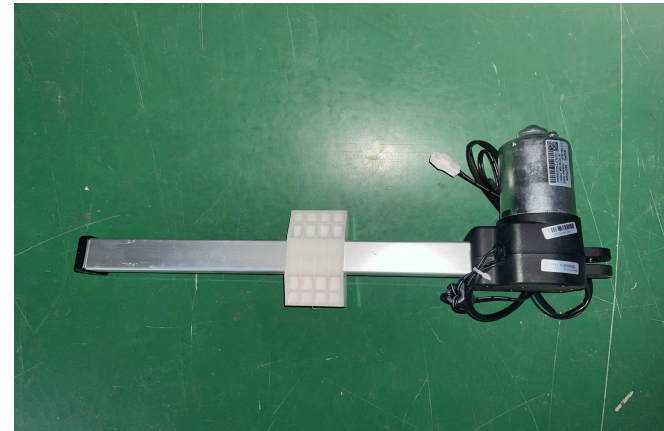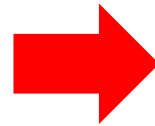

Remove the flat push rod



EASEPAL

厦门蒙发利电子有限公司客户服务部

五、按摩椅故障代表



EASEPAL

厦门蒙发利电子有限公司客户服务部

五、按摩椅故障代表



EASEPAL

厦门蒙发利电子有限公司客户服务部

五、按摩椅故障代表