1700 Serveice Menu

Model: 1700

Version: V1.0

Date : 2024-05-28

CONTENTS

I. Pillow and Cushion Assembled and Disassembled; 2

II. Wear-resistant Fabric of Mechanism Disassembled 3

III. Footrest disassembled 3

IV. side panel disassembled 5

V. Inner/Outer of side panel disassembled 7

VI. Shoulder Airbag disassembled 8

1:As photo below,unzip the zipper and remove the shoulder airbag leather. 8

VII. Mainboard disassembled 8

VIII.shortcut key disassembled 9

IX.Reclining Pushrod disassembled； 9

X. Footrest Pushrod disassembled 10

XI. Mechanism disassembled 10

XII.Footrest Disassembled 12

I. Pillow and Cushion Assembled and Disassembled;

1: Unzip as below;

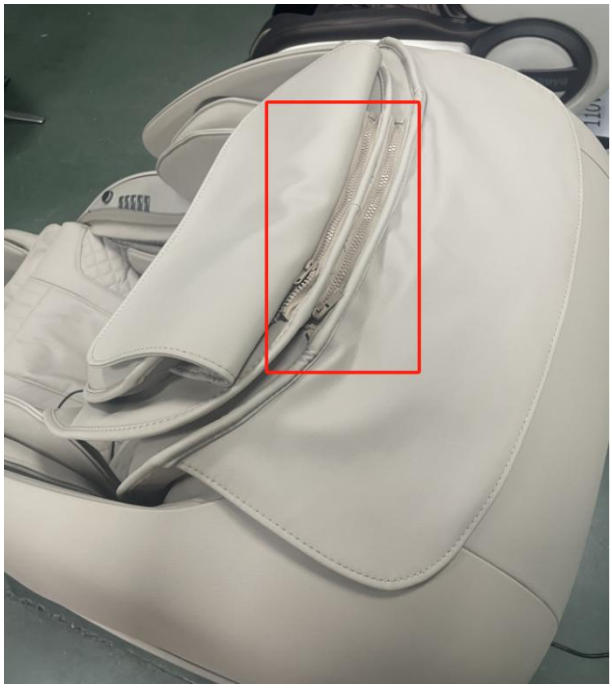

2: Unzip as belows photos.

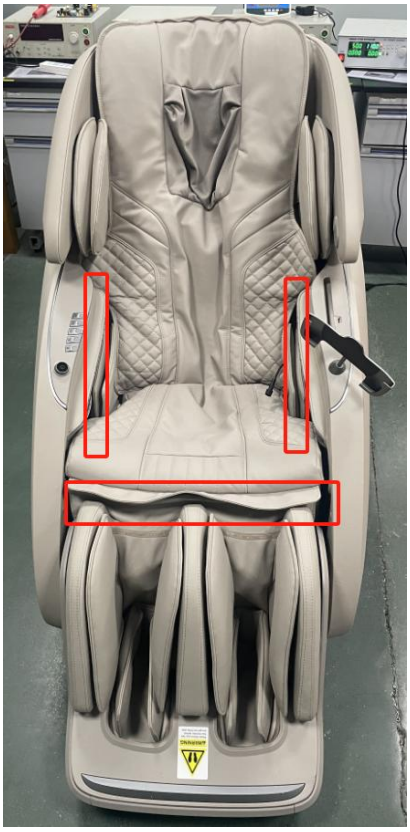

II. Wear-resistant Fabric of Mechanism Disassembled

1: unzip as below photos.

III. Footrest disassembled

1: As photo below, remove the screws on both side of footrest;

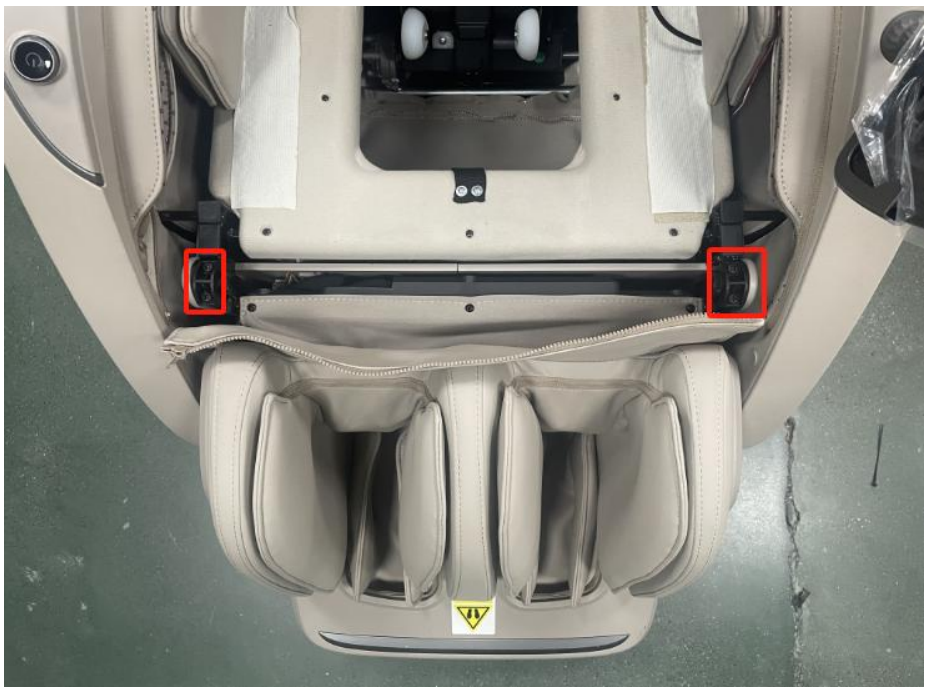

2: As photo below,disconnect the cable connector and air pipe joint;

3: As photo below,Remove the R-shaped bolt and connecting rod of footrest .

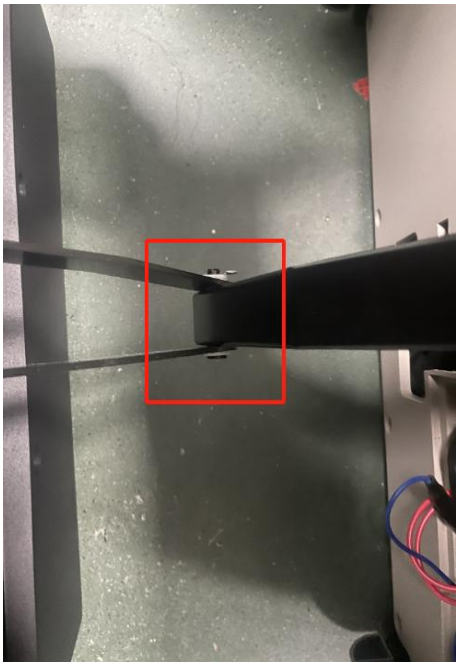

IV. side panel disassembled

1:As Photo below, unzip the cusion and remove the screws;

2: As photo below, disconnect the cable connector and air pipe joint in side panel;

3: As photo below, lift up the side panel along the track;

4: As photo below, after lifting the panel to the limit, pull the whole panel out lightly.

5: The other side panel disassembled with same steps.

V. Inner/Outer of side panel disassembled

1: As photo below, remove all screws;

2: As photo below, remove armrest leather and then the screws behind.

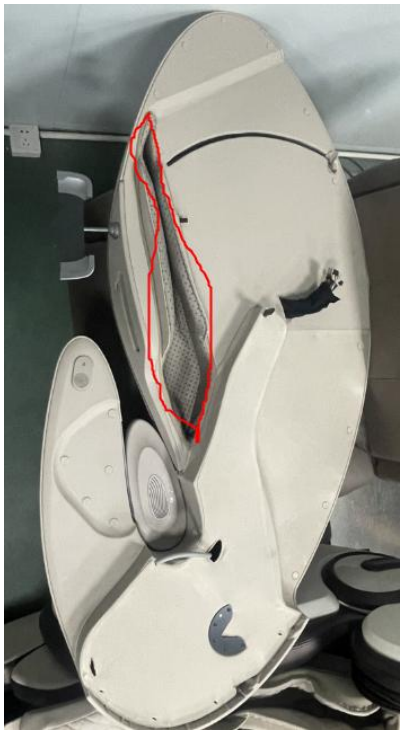

VI. Shoulder Airbag disassembled

1:As photo below,unzip the zipper and remove the shoulder airbag leather.

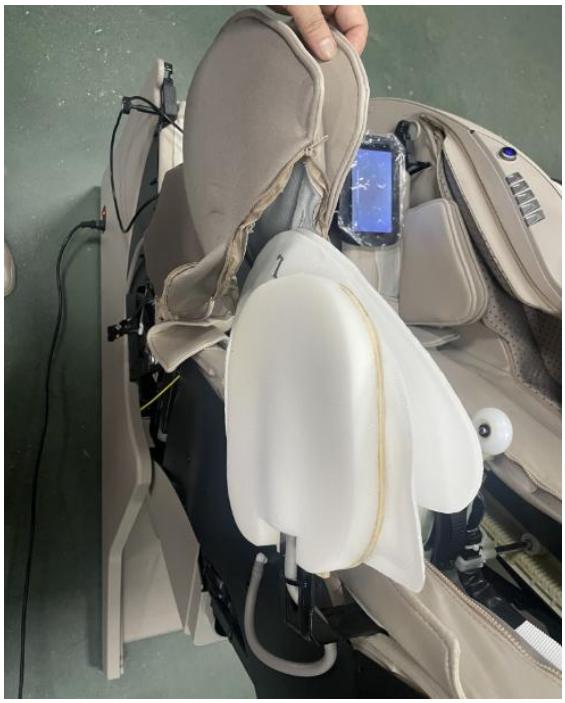

VII. Mainboard disassembled

1:As photo below, remove the screws

VIII. shortcut key disassembled

1: As photo below, open shortcut key along the seam.

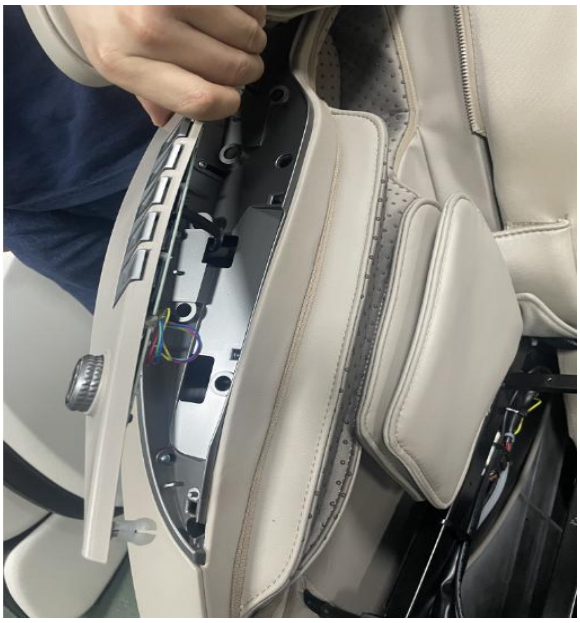

IX. Reclining Pushrod disassembled;

1: As photo below, remove the two hexagonal screws at the top of pushrod on back of chair. Remove the R-shaped bolt and the plastic fixture.

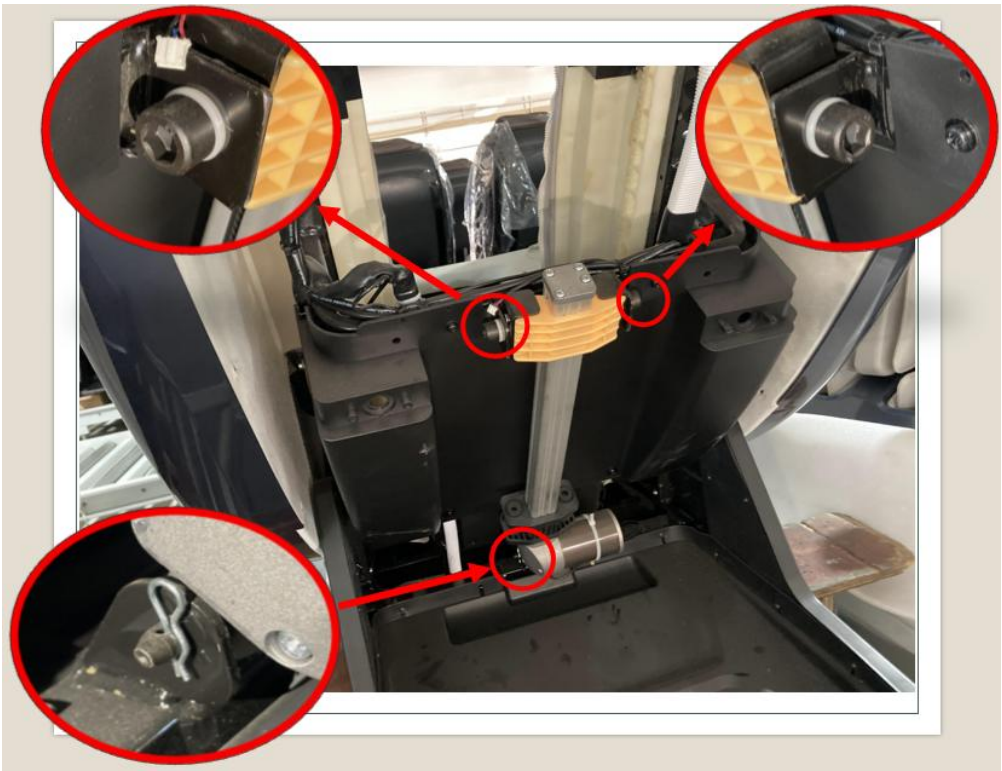

X. Footrest Pushrod disassembled

1:As photo below, remove the R-shaped bolt and plastic fixture

XI. Mechanism disassembled

1: As photo below, remove the five screws on the track;

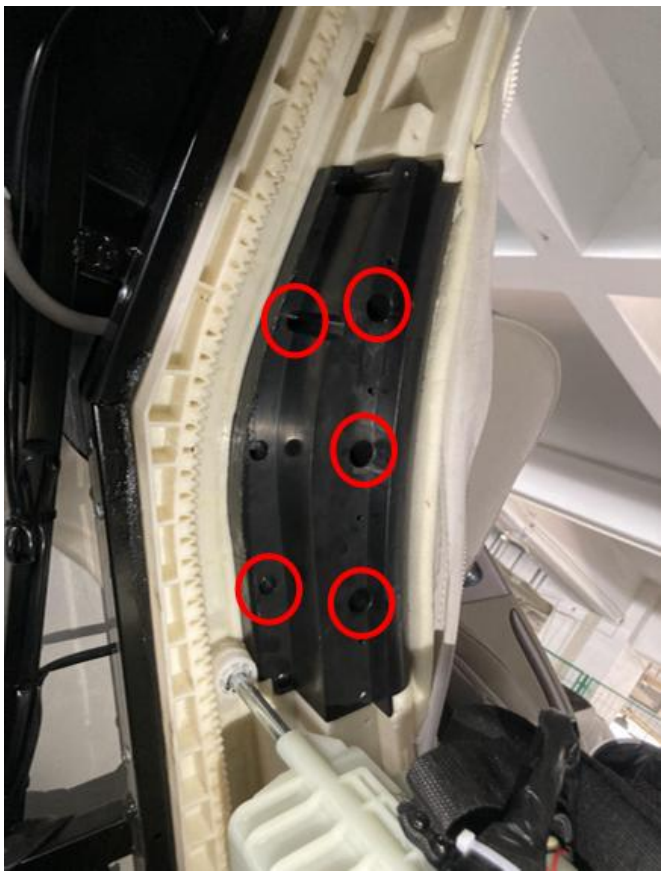

2: As photo below, take off the black position limiting component;

※ same steps to the same part at the other side;

3: As photo below, without black plastic position limiting companent, mechanism can be removed accordingly.

※Lower machanism can be removed by moving it to the position where upper mechanism is removed in power on status.

XII.Footrest Disassembled

1: As photo below, remove the five screws on the back of the footrest;

2: As photo below, After unscrews, you can take off the plastic cover of footrest;

3: As photo below, remove the two screws on both side;

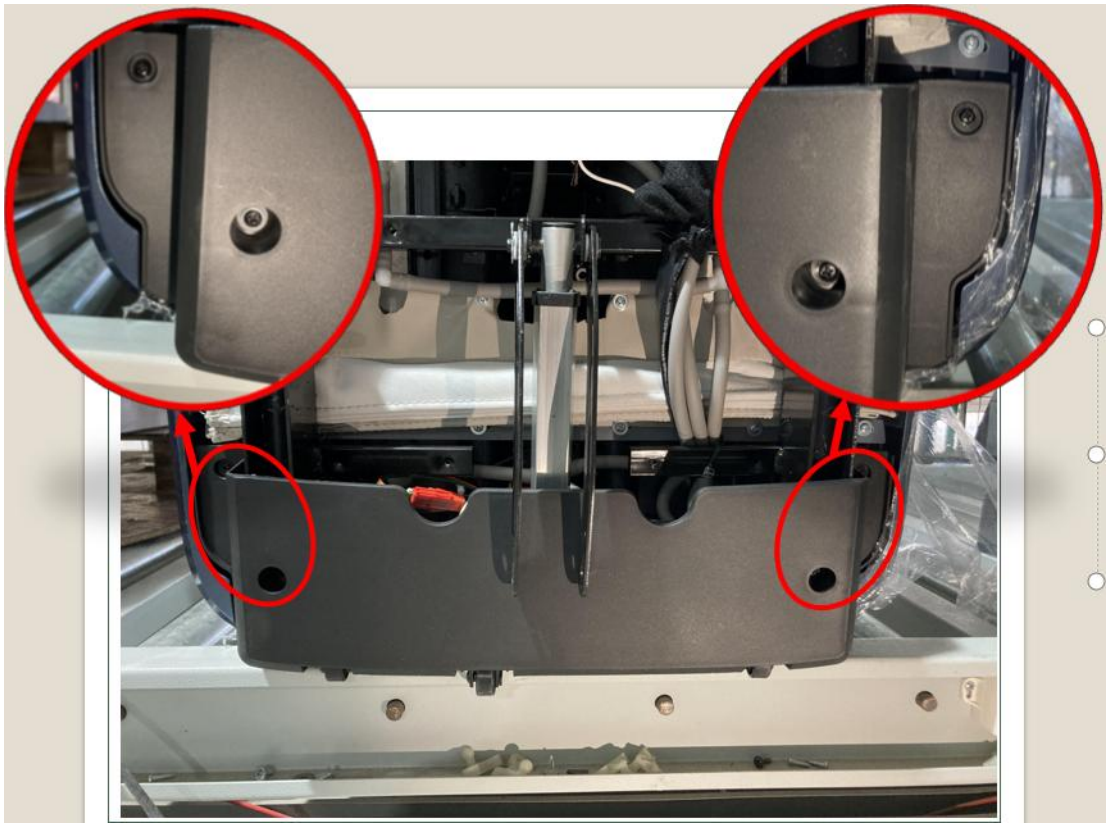

4: After unscrew, you can take off the plastic cover;

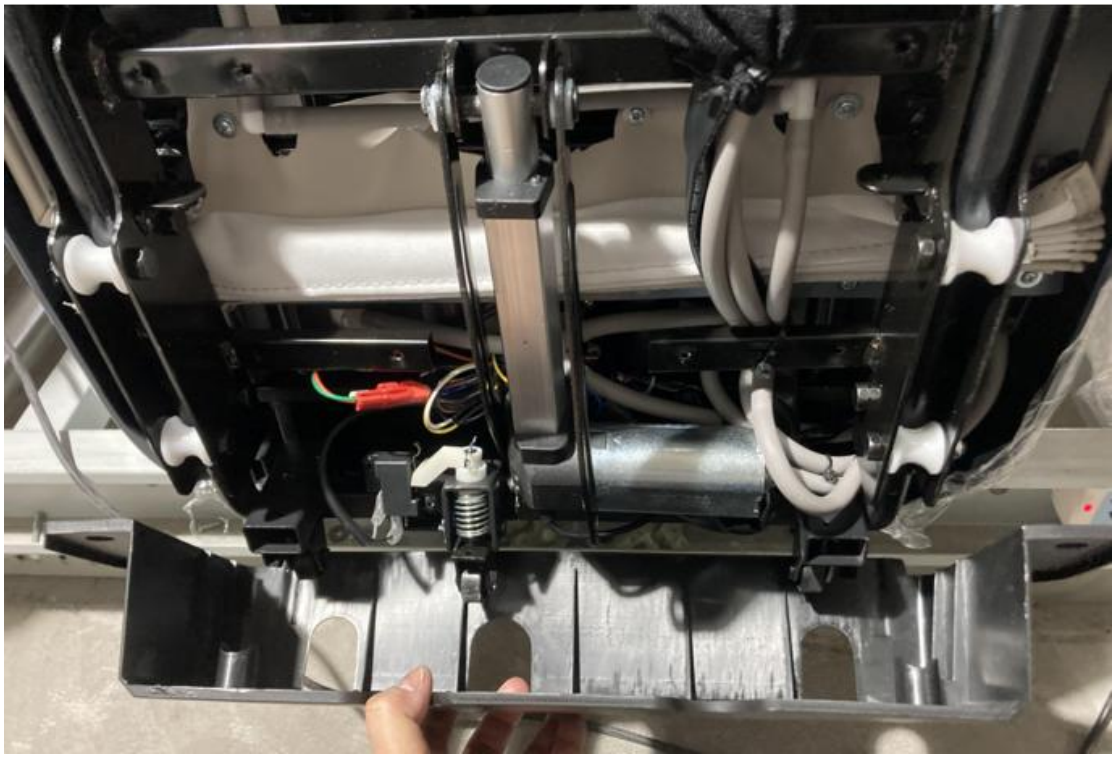

5: As photo below, remove the R- shaped bolt in the joint;

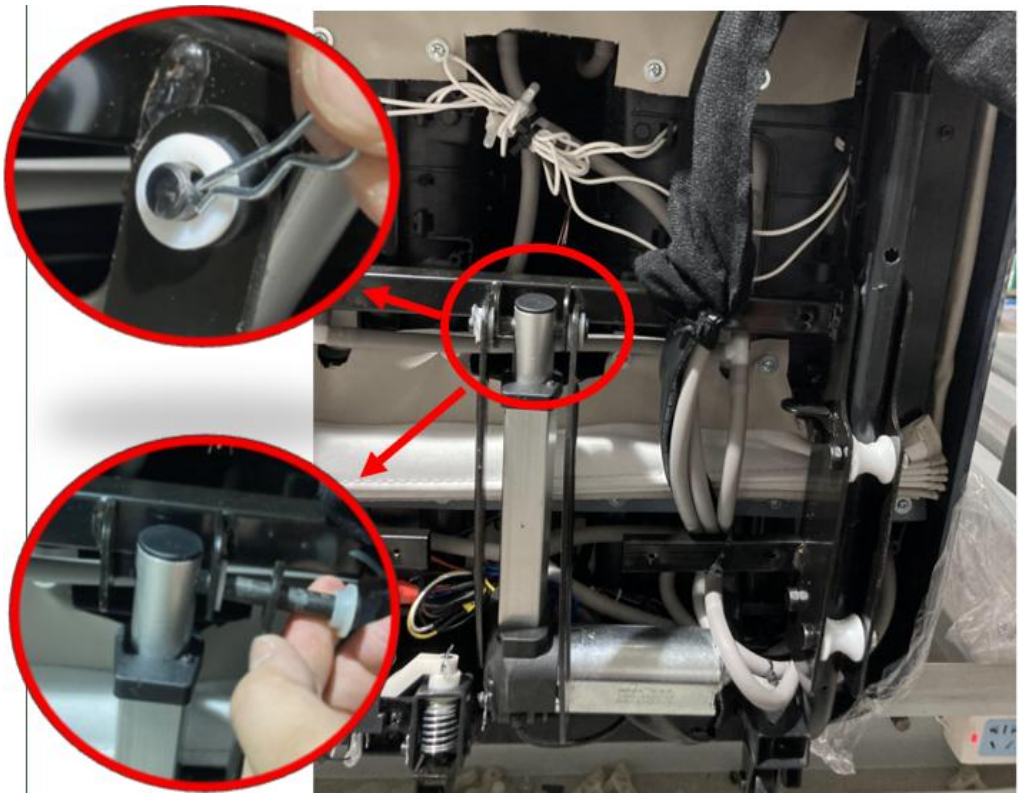

6: As photo below, turn over the pushrod, remove the R- shaped bolt in the joint again and cut the plastic fixture.

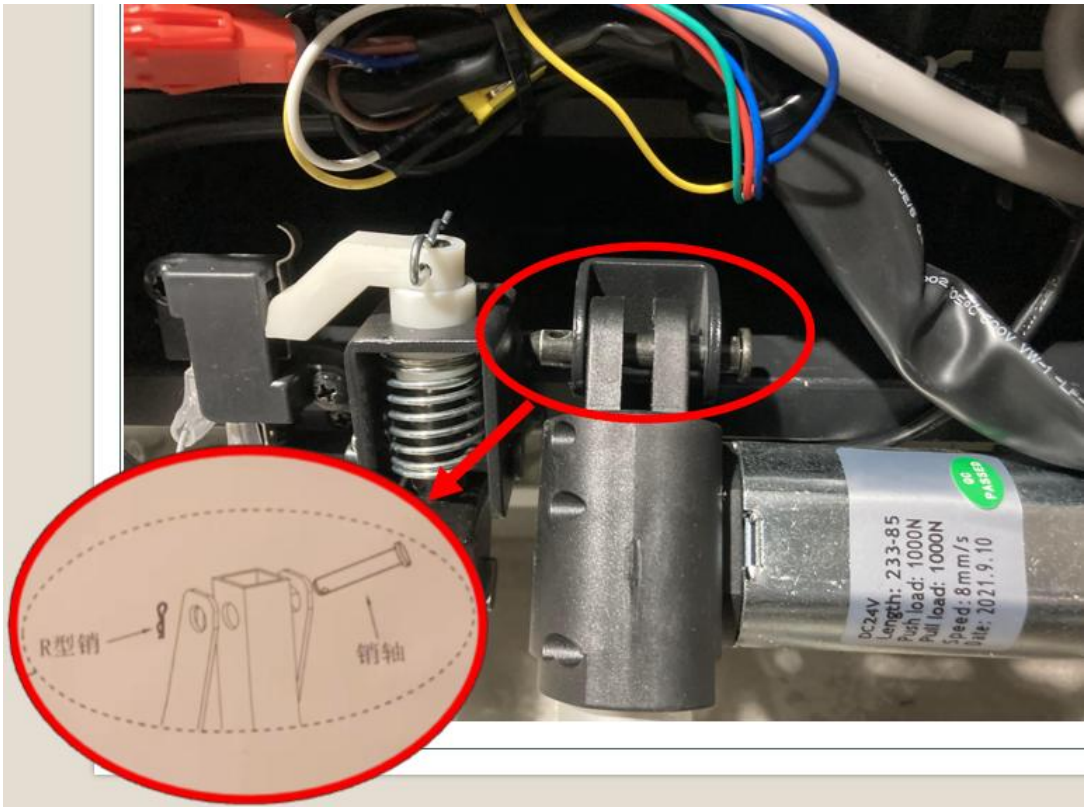

7: As photo below, cut plastic fixture.

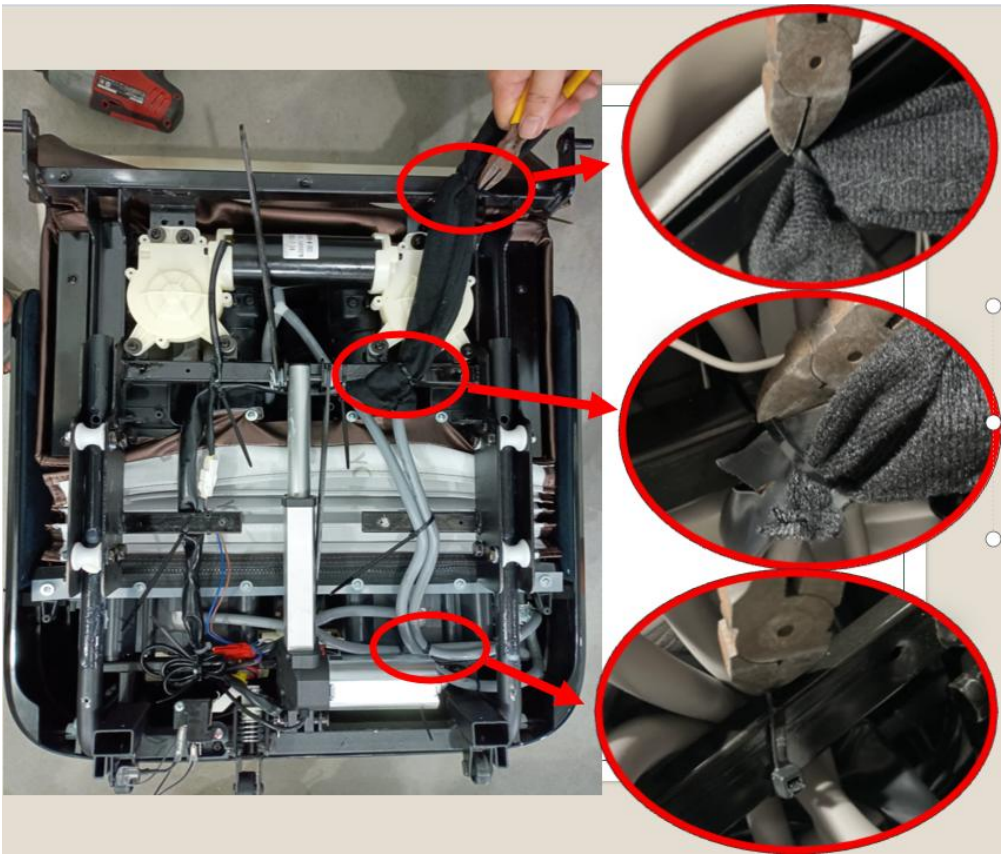

8: As photo below, extend the footrest, upzip the zipper under carf area.

9: As photo below,seperate the calf and foot assemblly.

10: As photo below,remove the plastic component on footrest with a plastic crowbar ;

11; take off the plastic component as photo below;

12; As photo below,remove the screws;

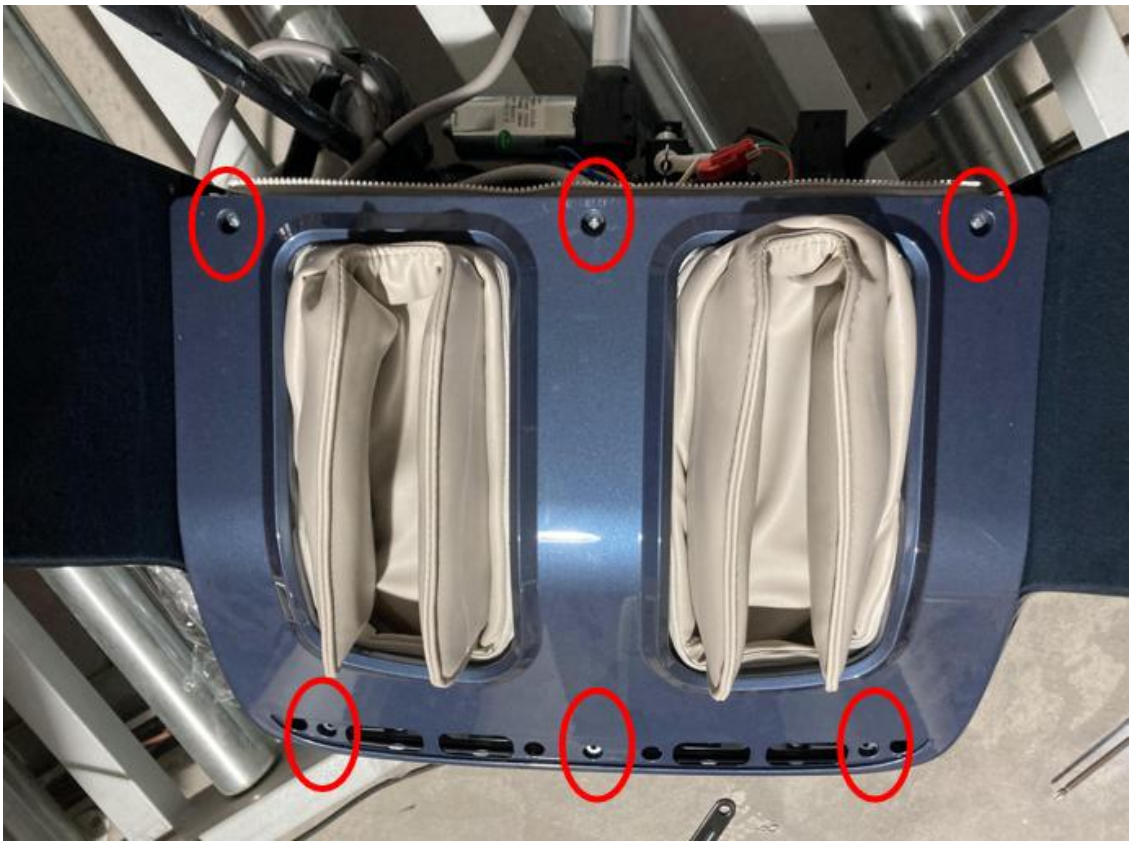

13: remove the plastic cover;

14: remove the screws as photo below;

15: devided the plastic cover as photo below;

※same step for the other side

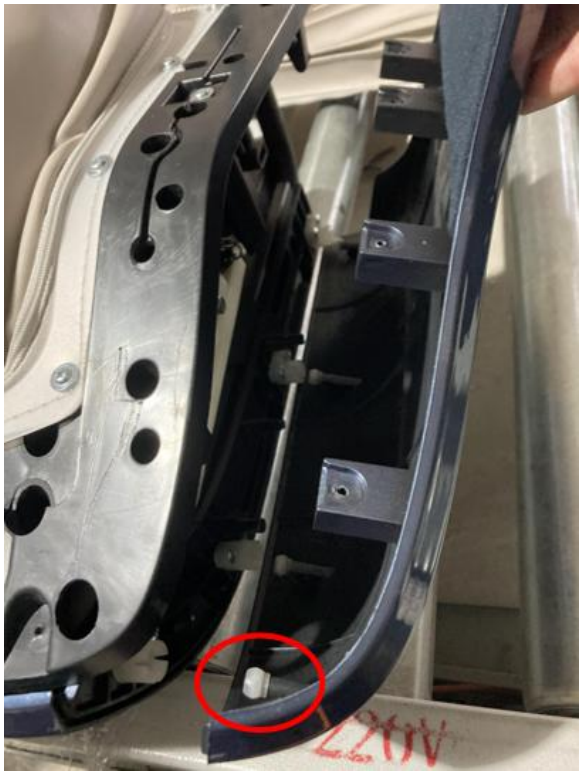

16: remove the screws as photo below;.

※ L shape tool like photo required

17: devided all the air pipe connector as photo below;

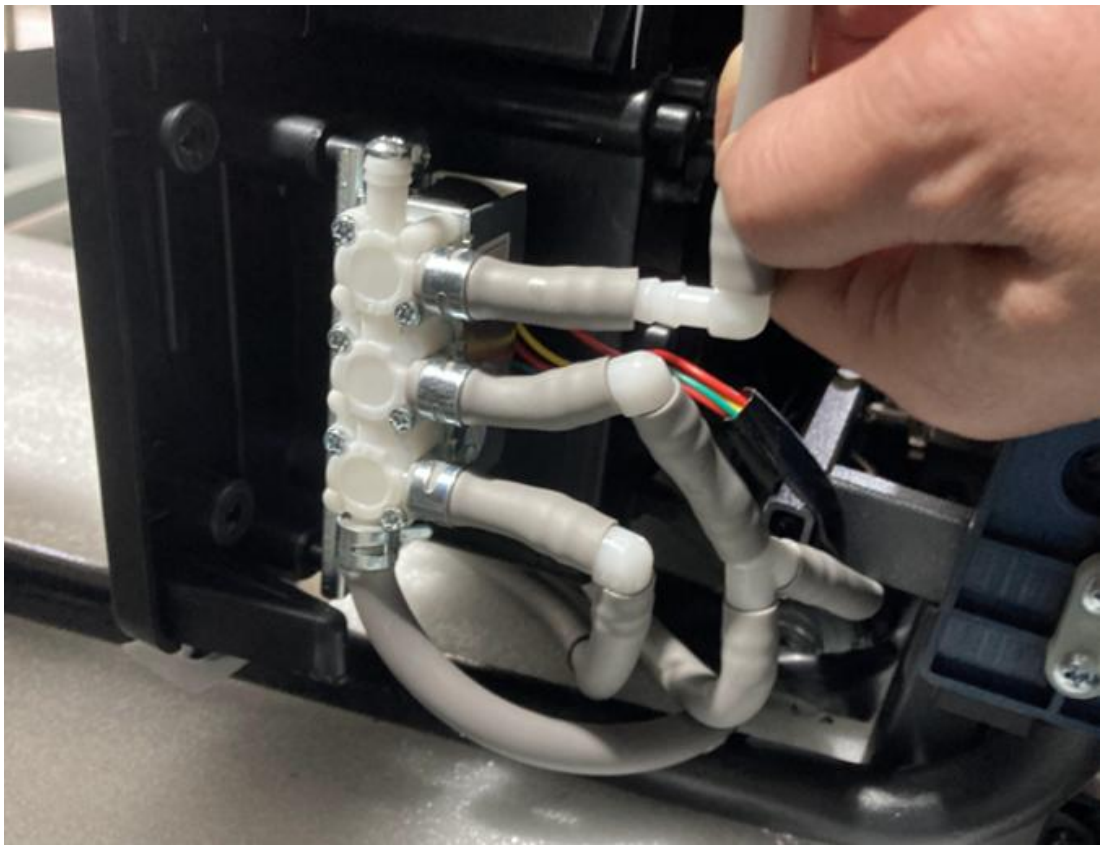

18: remove the spring at both side as photo below

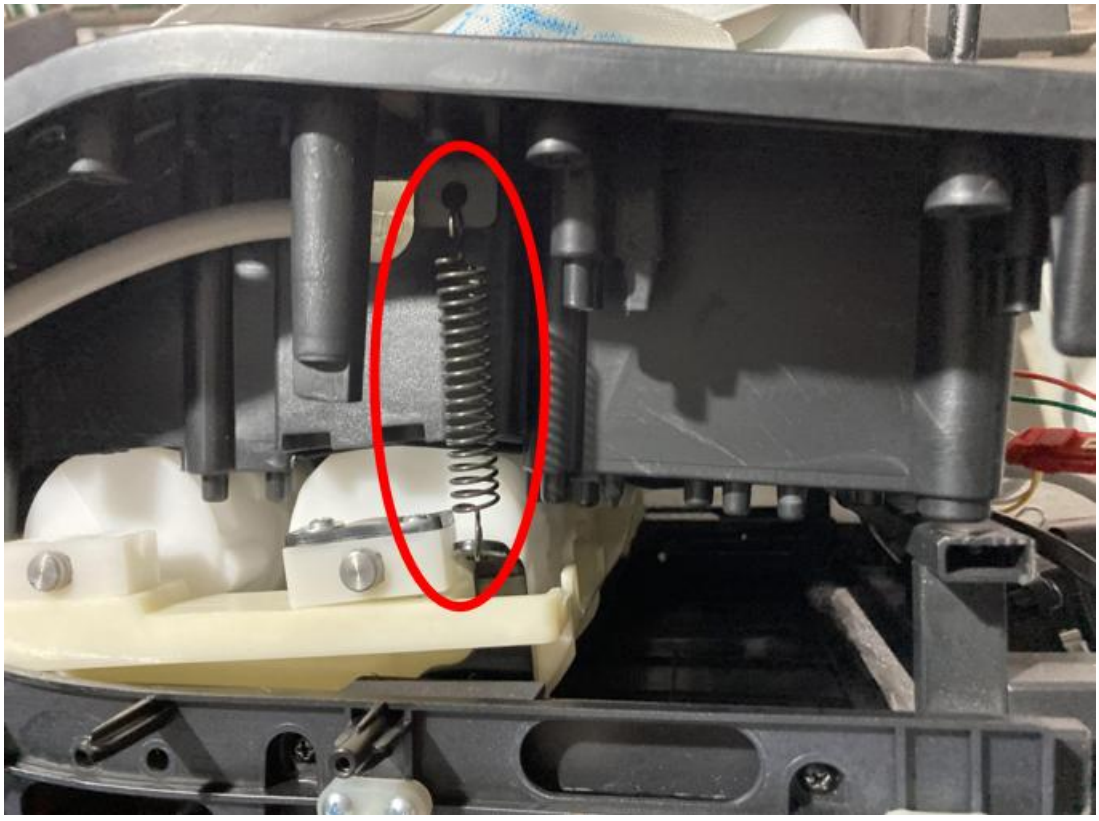

19: As photos below,remove the six screws;

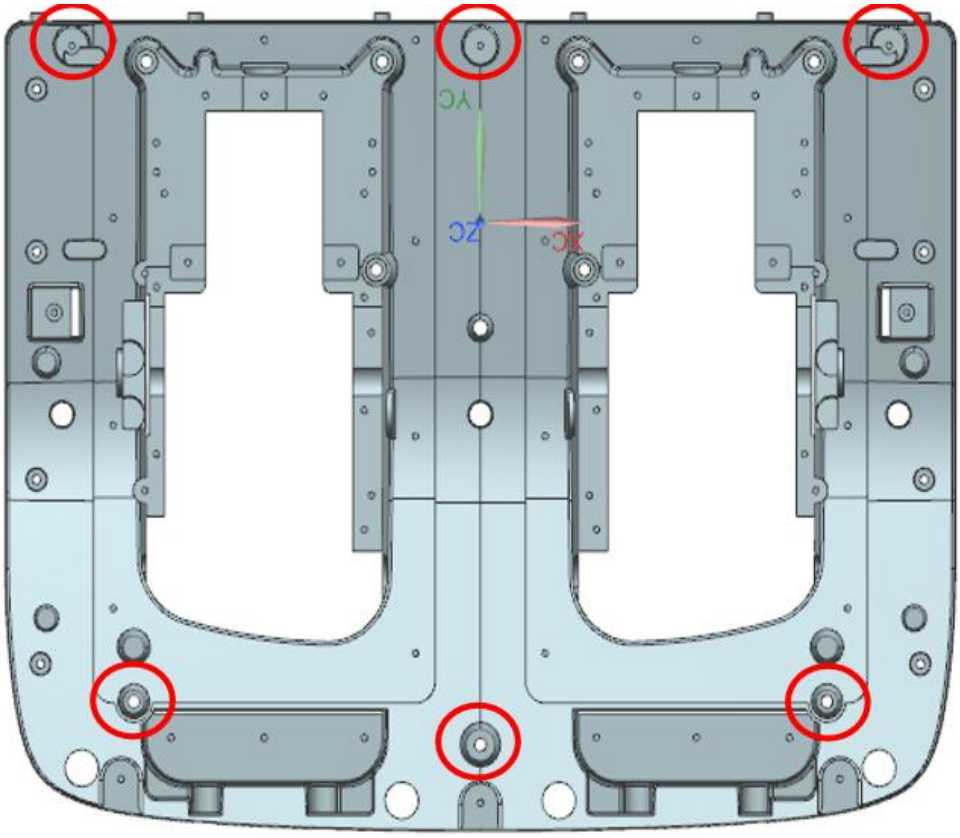

20: As photo below,plastic cover can be devided after unscrewing .

21: As photo below, remove all the screws on both side ;

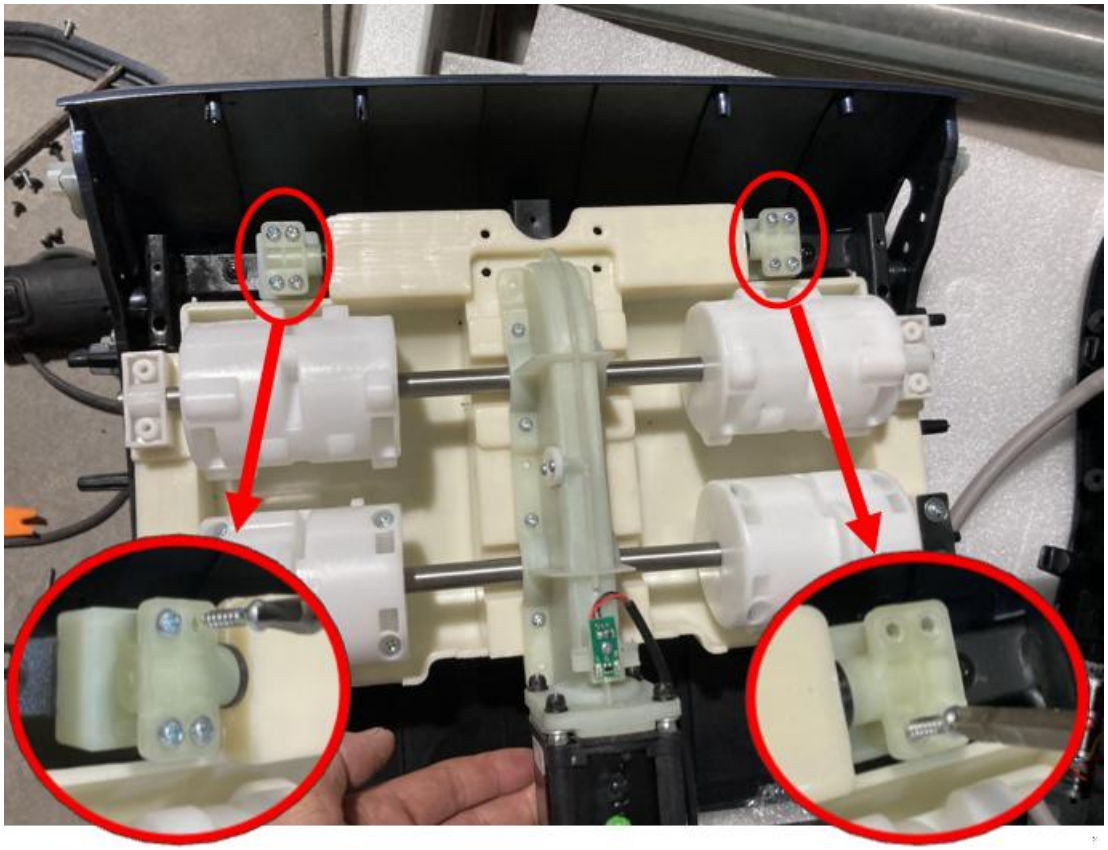

22: As photo below, devided the cable of the foot roller moter.

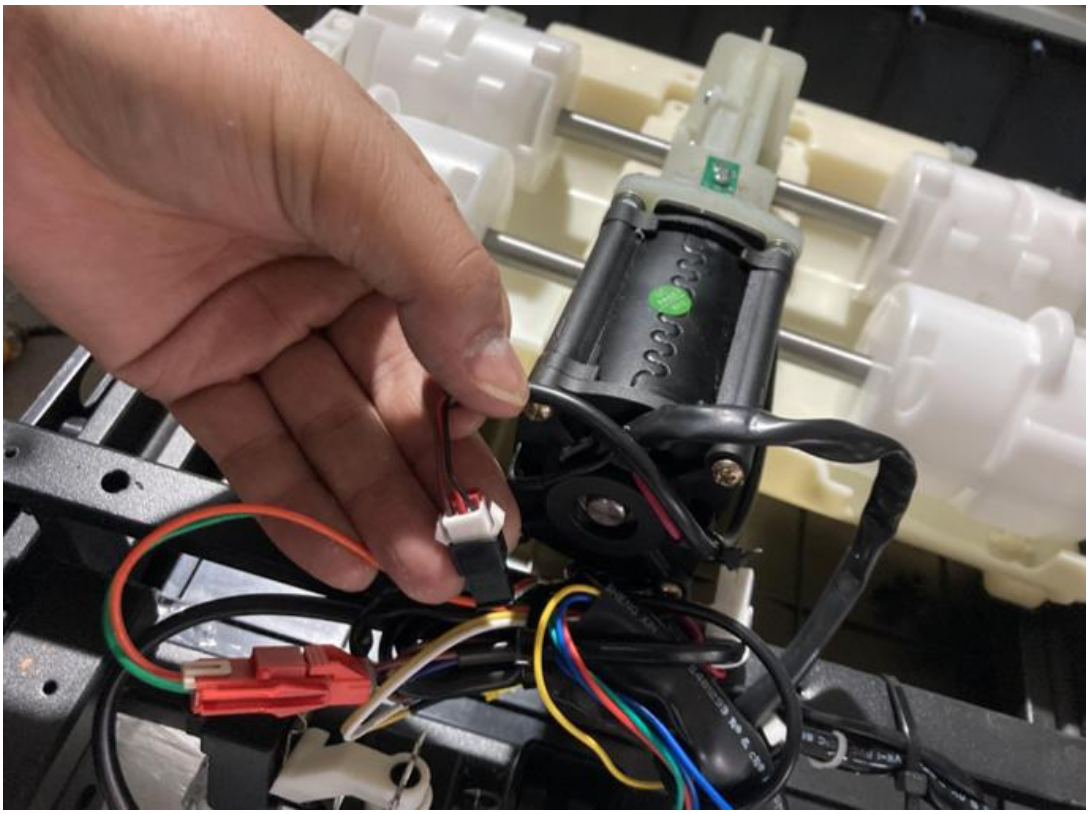
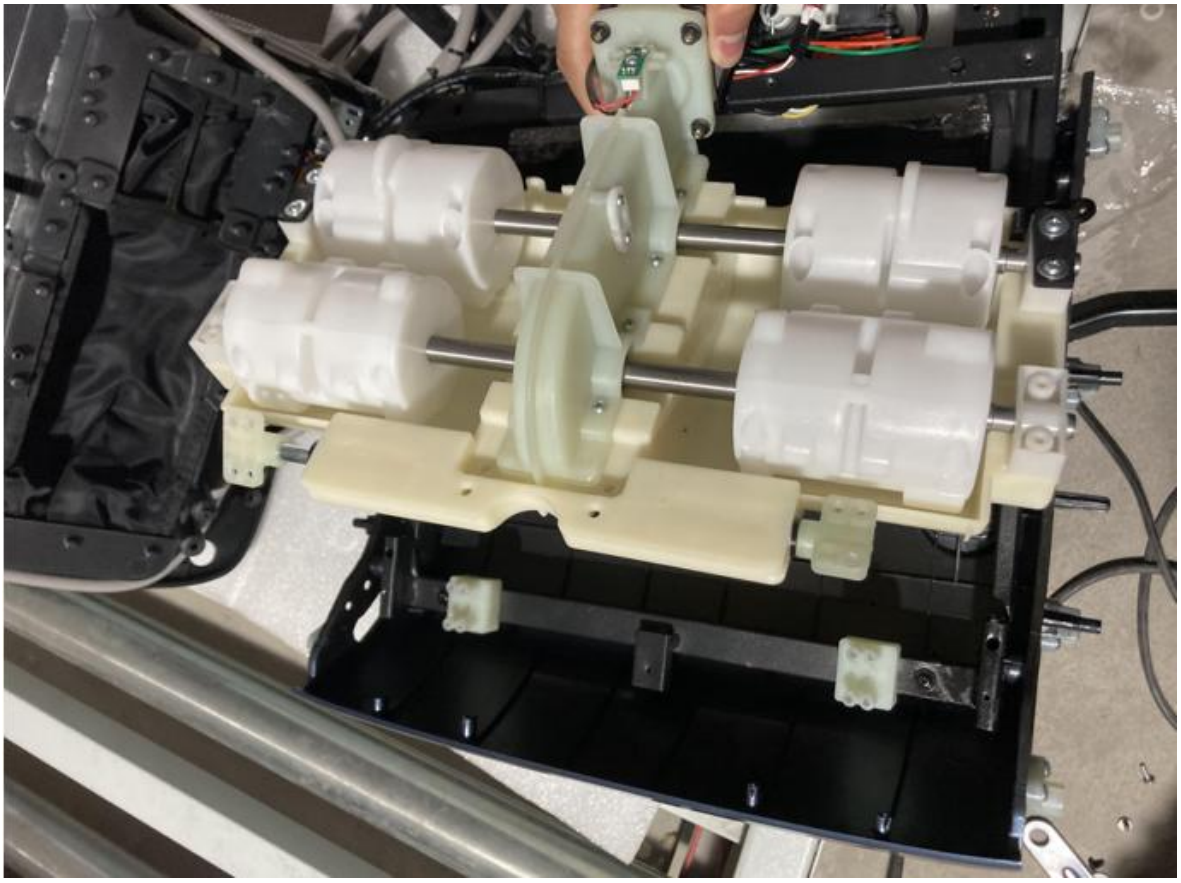
23: As photo below,moter is removable after completing the above steps.