

Titan



Auto



Manual



My Favorite



Position
Adjustment



Dynamic
Squeeze



Setting



Current Massage Program





Therapy



DEMO



THAI STRETCH



BODY
CIRCULATION



RELAX



MORNING
CARE



MIDDAY CARE




NIGHT CARE



DEEP TISSUE



Current Massage Program





Target



EXTENSION



WOMEN'S
HEALTH



SHIATSU



MEN'S HEALTH



OFFICE RELIEF



SPORTS
RECOVERY




FOOT CARE



REJUVENATE



Current Massage Program





Focus



NECK
MASSAGE



NECK AND
SHOULDER
MASSAGE



BACK
MASSAGE



LUMBAR
MASSAGE



WAIST HIP
MASSAGE



LEGS
MASSAGE



UPPER BODY



LOWER BODY



Current Massage Program






Body Detection

Massage chair will automatically detect the body and adjust the seat position. Please keep your head resting on the headrest and sit in the deepest position.

The massage system is going to detect the body.....

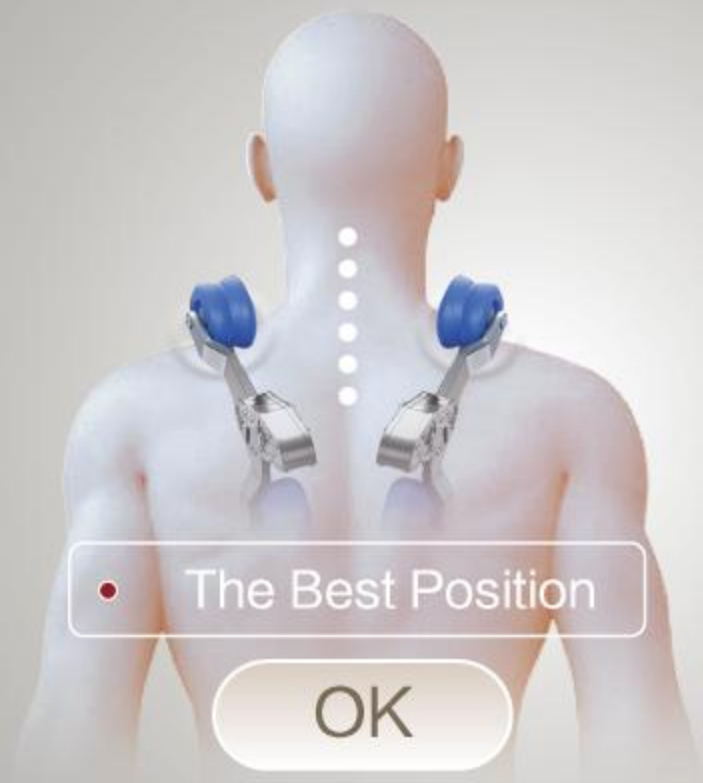 **Shoulder Adjust**

Please press up and down to
adjust the roller position...

- The Best Position

OK



Auto

Manual

Dynamic Squeeze

Position Adjustment

★ My Favorite


Core Strength +

Air Intensity +

3D

Air Intensity -

Core Strength -

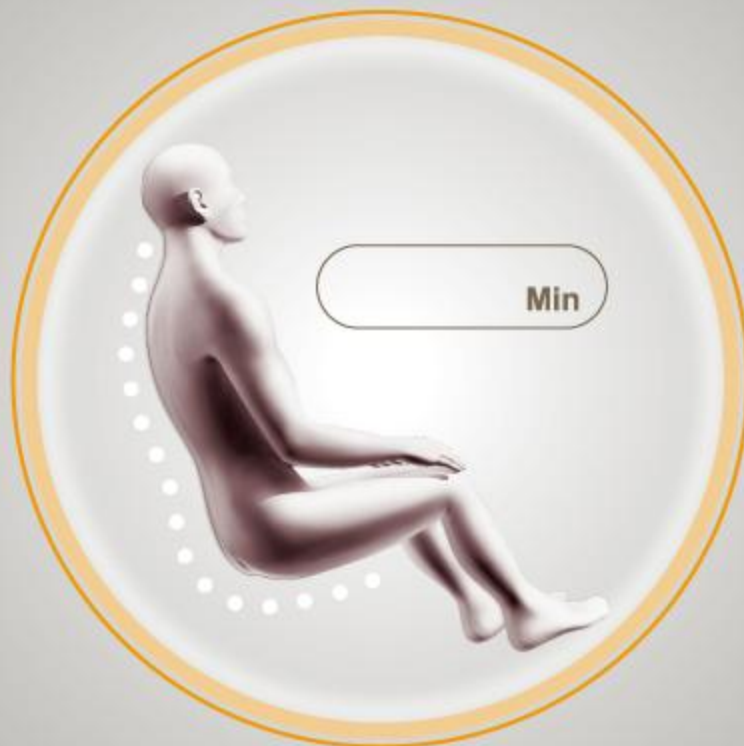

Massage Speed +

Massage Time +

Massage Time -

Massage Speed -



Roller Position



Heating



Current Massage Program





Manual



Auto

Manual

Dynamic Squeeze

Position Adjustment

★ My Favorite



Roller Position Adjustment



Roller Width

Area Selection



Kneading Kneading & Tapping Knock Tapping Shiatsu Combination



Roller Position



Heating



Current Massage Program



Dynamic
Squeeze



Auto

Manual

Dynamic
Squeeze

Position
Adjustment

★ My Favorite

— Air Intensity



+ Air Intensity

Full Body

Shoulder

Arm

Leg & Feet

Current Massage Program






Auto

Manual

Dynamic Squeeze

Position Adjustment

★ My Favorite

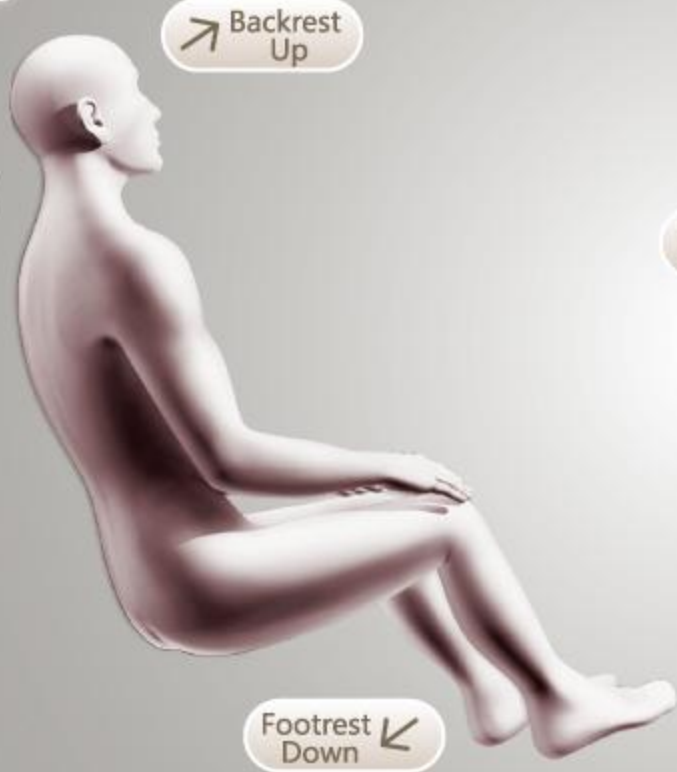

↗ Backrest Up

↙ Backrest Down

↖ Foot Shrink

↘ Foot Extend

↙ Footrest Down

↗ Footrest Up

Zero Gravity



Watching TV Reading




When adjusting position, children sitting in front or behind the massage chair, please note do not allow pets to approach.

Current Massage Program





Current Massage Program





Function Setting

Language


Others



Leg Kneading




Foot Roller



Heating



Current Massage Program





Function Setting

Language

Others


English

한국어

简体中文



Current Massage Program





Function Setting


Language

Others

Voice Commands




Dormancy Time



Voice Control



Backlight



Key Tone



Bluetooth

Sleep Mode

Current Massage Program



Voice control function

- Go to " SETTING" and tap on the "VOICE CONTROL" icon button to activate, then say " Hi,Titan/ Hey,Titan ", you will get a reply "What can I do for you?"
- The commands are shown in table below.

| | Voice Commands | | Voice Commands | | Voice Commands | | Voice Commands |
|---|---------------------------|----|----------------------|----|--------------------------------|----|-------------------|
| 1 | HI,TITAN / HEY,TITAN | 10 | NIGHT CARE MODE | 19 | REJUVENATE MODE | 28 | INCREASE STRENGTH |
| 2 | PAUSE MASSAGE | 11 | DEEP TISSUE MODE | 20 | NECK MASSAGE MODE | 29 | DECREASE STRENGTH |
| 3 | STOP MASSAGE | 12 | EXTENSION MODE | 21 | NECK AND SHOULDER MASSAGE MODE | 30 | INCREASE AIR |
| 4 | DEMO MODE | 13 | WOMEN'S HEALTH MODE | 22 | BACK MASSAGE MODE | 31 | DECREASE AIR |
| 5 | THAI STRETCH MASSAGE MODE | 14 | SHIATSU MODE | 23 | LUMBAR MASSAGE MODE | | |
| 6 | BODY CIRCULATION MODE | 15 | MEN'S HEALTH MODE | 24 | WAIST & HIP MASSAGE MODE | | |
| 7 | RELAX MASSAGE MODE | 16 | OFFICE RELIEF MODE | 25 | LEGS MASSAGE MODE | | |
| 8 | MORNING CARE MODE | 17 | SPORTS RECOVERY MODE | 26 | UPPER BODY MASSAGE MODE | | |
| 9 | MIDDAY CARE MODE | 18 | FOOT CARE MODE | 27 | LOWER BODY MASSAGE MODE | | |

- The massage chair will execute the commands within 10 seconds.
- If the commands were not said out clearly, the massage chair will not execute the commands.
- If there is no new command after 15 seconds, the voice control system will response "Thank you for using"
- To resume voice control, say " Hi,Titan/Hey,Titan " again.





The massage chair is being reset, please wait...